

TABLE OF CONTENTS

INSTRUCTIONAL GUIDE TO HORSE

*TITLE & COVER.....	A1
*DIAGRAM OF FRAME MEASUREMENTS & PLACEMENT.....	1
*DIAGRAM OF WIRE PLACEMENTS.....	2
*DIAGRAM OF BODY & TOPLINE & SHAPING.....	3
*DIAGRAM OF WITHERS,BARREL,FLANK.....	4
*DIAGRAM OF SHOULDER,REAR SECTION,MUZZLE,EARS.....	5
*FORELEG & PLACEMENT.....	6
*FORELEG & SOLE VIEW.....	7
*HINDLEG VIEW & PLACEMENT.....	8
*SIDE VIEW OF FORELEG & HINDLEG.....	9
*SADDLE & BRIDLE (WITH OR WITHOUT).....	10
*DIAGRAM & MEASUREMENTS OF ROCKERS.....	11
*STICK HORSE (JIM DANDY).....	F
*MATERIAL LIST.....	A
*INSTRUCTIONS FOR BODY SHELL.....	B
*THROAT,EARS,JOWL,FORHEAD,MUZZLE,HIP,&CROUP.....	C
*TAIL ATTACHMENT.....	D
*CONNECTING WIRE ATTACHMENT AND WEBBING.....	D
*LEG PLACEMENT.....	E
*MANE AND TAIL ATTACHMENT.....	E
*SHELL & LEG PLACEMENT ON FRAME.....	E
*ROCKER ATTACHMENT (OPTIONAL).....	E1

BOVINE


*TITLE & COVER.....	A1
*DIAGRAM OF FRAME MEASUREMENTS & PLACEMENTS.....	1
*DIAGRAM OF WIRE PLACEMENT.....	2
*DIAGRAM OF BODY & TOPLINE & SHAPEING.....	3
*DIAGRAM OF WITHERS,BARREL,FLANK.....	4
*SHOULDER,EARS,BRISKET,HORNS,NECK,MUZZLE,FORHEAD.....	5
*FORELEG VIEW & PLACEMENT.....	6
*FORELEG & AOLE VIEW.....	7
*HINDLEG VIEW WITH CONNECTING WIRE.....	8
*SIDE VIEW OF FORELEG & HINDLEG.....	9
*WITH OR WITHOUT BELLS,BULLROPE,OR FLANK STRAP.....	10
*ROCKER ATTACHMENT (OPTIONAL).....	11
*MATERIAL LIST.....	A
INSTRUCTIONS FOR BODY SHELL.....	B
*THROAT,JOWL,HORNS,MUZZLE,FORHEAD,HIP,BUTTOCK.....	C
*TAIL ATTACHMENT.....	D
CONNECTING WIRE ATTACHMENT & WEBBING.....	D
*EAR ATTACHMENT & SHAPEING.....	D
*SHELL & LEG PLACEMENT ON FRAME.....	D1
*LEGS & ATTACHMENT TO BODY.....	E
*TAIL TUFT ATTACHMENT.....	E
*ROCKER ATTACHMENT OPTIONAL.....	E2
*COLOR PHOTOGRAPHS OF ASSEMBLY PROCESS.....	F1

&
F2

1007478 10001

Pamela Horses

Equine, Bovine and Accessories

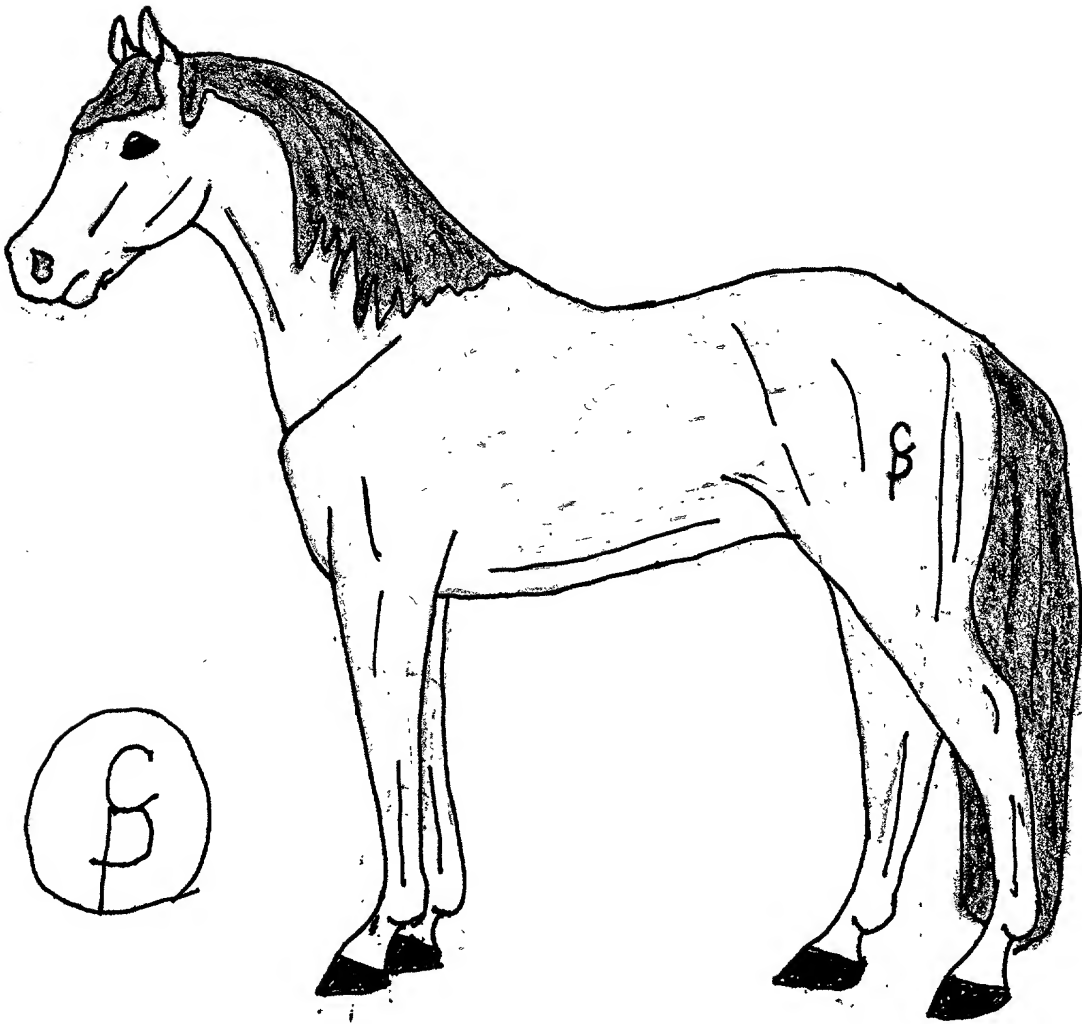

(A)

MATERIAL LIST

10 AW ELECTRIC WIRE (FOR BODY AND LEGS)
ELECTRIC FENCE WIRE (CONNECTING WIRE)
SIX CONDUCTOR WIRE (TELEPHONE CORD) TO MAKE WEBBING
STUFFING MATERIAL (PAPER OR ANY SUITABLE FILLER)
FABRIC 3 1/2 YARDS (VALOUR WORKS BEST BUT IS OPTIONAL)
REBAR 3/4" FOR BACK AND LEGS & 1/2" FOR BRACES
OR
MOP HANDLES 1" IN DIAMETER
2X6 BOARD FOR ROCKERS (OPTIONAL)
2X4 BOARD CAN BE USED FOR BACK WITH MOP HANDLES (WOODEN FRAME)
(5/16 BOLTS (HEX) TO SECURE HORSE TO ROCKERS
4 (OR
(3" LAG SCREWS (TO USE WITH WOODEN FRAME)

FOR "JIM DANDY"

DOWEL STICK (1" IN DIAMETER OR MOP HANDLE THE SAME SIZE)
10 AW ELECTRIC WIRE (FOR HEAD)
ELECTRIC FENCE WIRE (CONNECTING WIRE)
SIX CONDUCTOR WIRE (TO MAKE WEBBING)
STUFFING MATERIAL (PAPER OR ANY SUITABLE FILLER)

10007478-110001



SHELL OF BODY

(B)

(1)

MEASURE WIRE FOR TOPLINE,CONNECT ENDS TOGETHER,CREATE SHAPE.

HOOKED ENDS

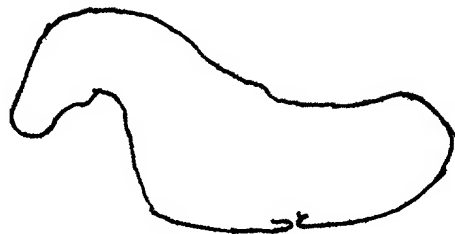


(2)

MEASURE WIRE FOR BODY,FOLD IN HALF,TWIST ONTO TOPLINE AT THE THIGH AREA,SQUEEZE HOOKED ENDS ONTO CHEST,SHAPE BODY.

THIGH

CHEST


ATTACH HERE

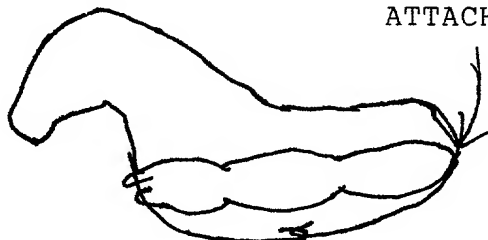

(3)

MEASURE 3-5,FOLD IN HALF,TWIST ONTO TOPLINE,FOLD IN HALF AGAIN,TWIST ONTO SIDE PIECES TO CONNECT BODY TO TOPLINE AND TO CREATE START OF RIB CAGE,CONNECT HOOKED ENDS TO GRITH & BELLY.

TOPLINE


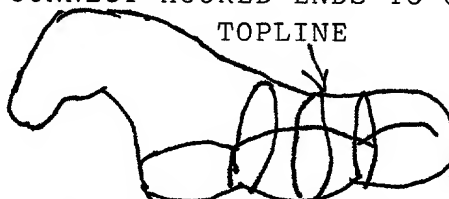


(4)

FOR SHOULDERS,FOLD IN HALF,TWIST ONTO TOPLINE IN FRONT OF WITHERS,CONNECT ONTO BODY AT POINT OF SHOULDERS.

POINT OF SHOULDERS

WITHERS

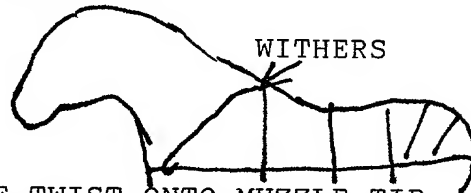
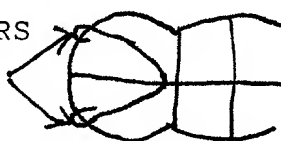


(5)

MEASURE NECK & CHEEK PIECE,FOLD IN HALF,TWIST ONTO MUZZLE TIP WHERE UPPER LIP WILL BE,CONNECT TO SHOULDER WITH HOOKED ENDS.

TIP OF MUZZLE

SHOULDER

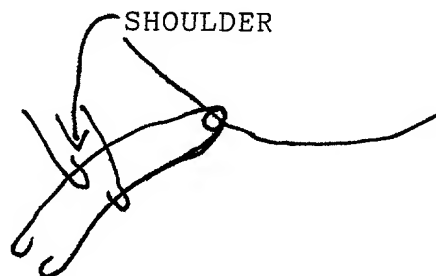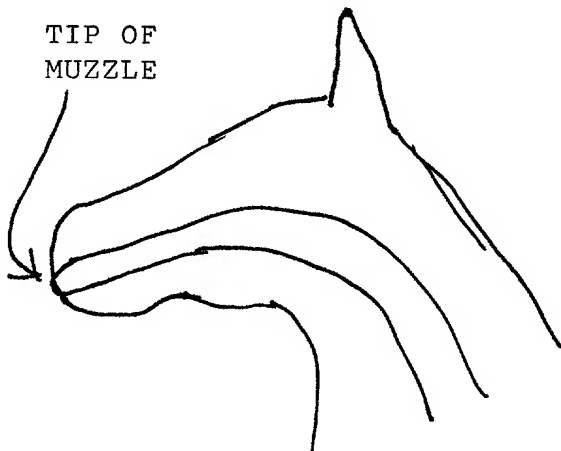


FOOT 24000

(C)


(6)

FOR THROAT, FOLD WIRE IN HALF, TWIST ONTO CREST OF NECK. TWIST AROUND NECK & CHEEK PIECES, CONNECT TO THROATLATCH WITH HOOKED ENDS.

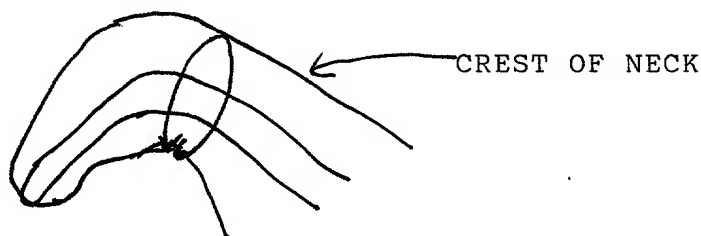


(7)

FOR JOWL & EARS, FOLD PIECE IN HALF, TWIST ON AT THROATLATCH, AGAIN AT CHEEK, THEN FOLD PIECE FOR POLL IN HALF, TWIST ON AT TOP OF HEAD, ATTACH TO EARS WITH HOOKED ENDS.

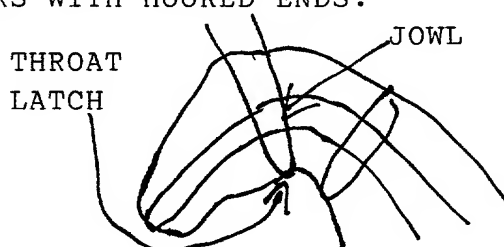

(8)


FOLD FORHEAD IN HALF, TWIST ONTO CENTER WIRE OF HEAD, SHAPE AND ATTACH TO CHEEKS WITH HOOKED ENDS.

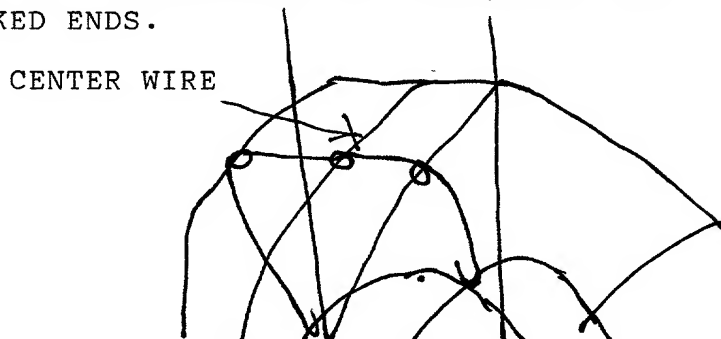

(9)


FOR MUZZLE FOLD IN HALF, ATTACH ON BRIDGE OF NOSE, TWIST AROUND CHEEK PIECES, CONNECT TO CHIN WITH HOOKED ENDS.

BRIDGE OF NOSE

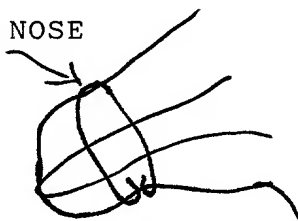

(10)


TAKE PIECE FOR POINT OF HIP, FOLD IN HALF, ATTACH TO TOPLINE BY TWISTING ON, ATTACH TO BODY PIECE WITH HOOKED ENDS, DO THE SAME WITH CROUP PIECE.

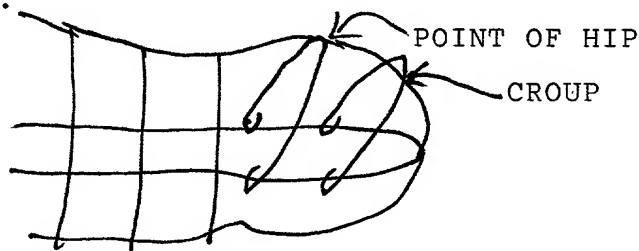

(D)


(11)

TO ATTACH TAIL TO BODY, MEASURE FIVE INCHES AND FOLD, TWIST ONTO TOPLINE JUST BELOW CROUP AND ATTACH WITH HOOKED END TO POINT OF HIP.

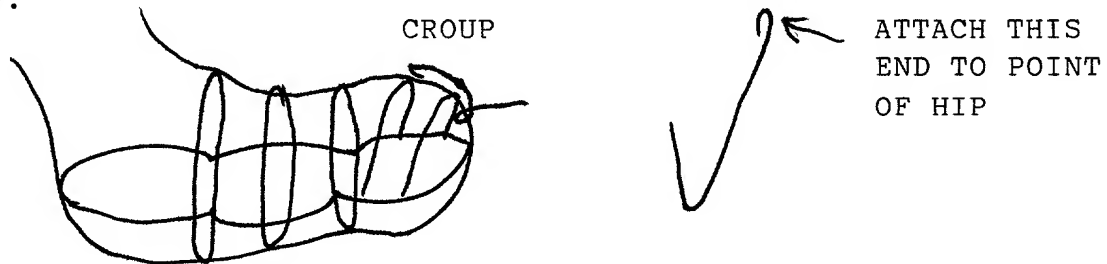

(12)

TO MAKE SHELL USE CONNECTING WIRE AT 4" INTERVALS, THIS SHOULD PRODUCE SQUARES OVER WHOLE BODY, BY TWISTING AROUND EACH PART OF BODY TO SECURE AND FORM MUSCLE & TONE.

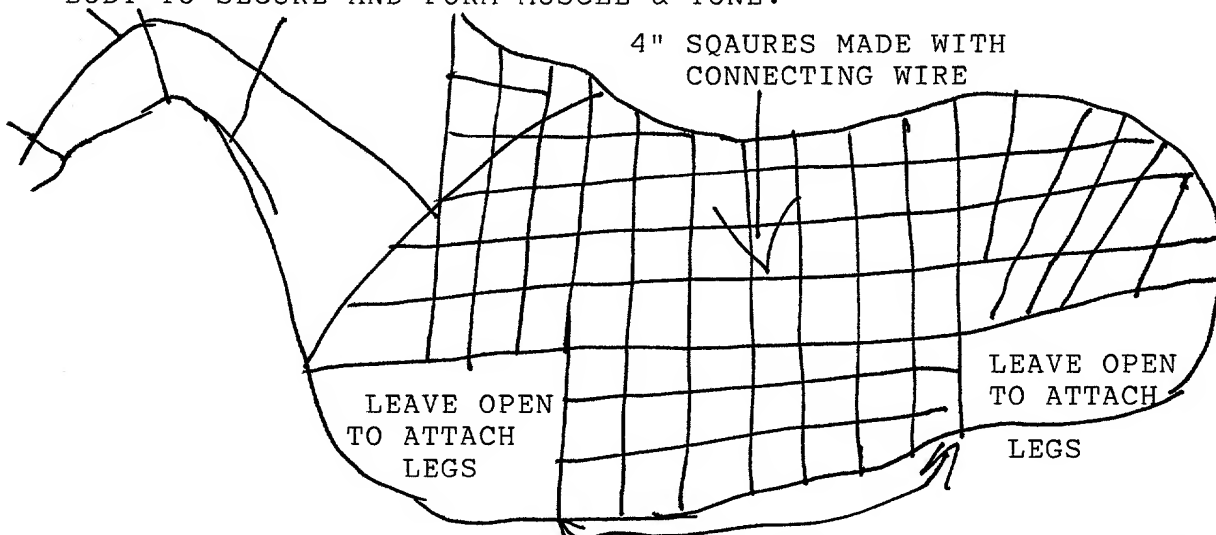

BE SURE THIS AREA IS ALL HOOKED ENDS

(13)


TO MAKE WEBBING USE TELEPHONE CORD (STRIPPED OF OUTER COVERING) TIE ONTO SHELL ANYWHERE TO START, TWIST AROUND BOTH CONNECTING WIRE & BODY PIECES AT 1" INTERVALS ALL OVER BODY UNTIL YOU HAVE 1" SQUARES COVERING BODY AREA COMPLETELY, DO THE SAME WITH LEGS.

STRIP THIS OFF



1" WEBBING


4" SQUARE

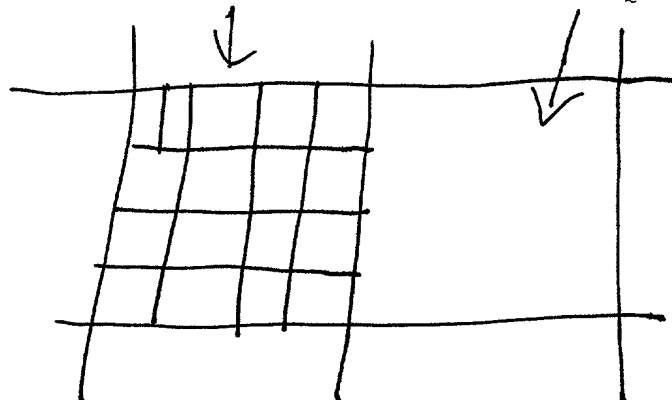

LEGS


(1)

START WITH FRONT OF LEG AND SOLE OF HOOF(D1), SHAPE AS INDICATED MEASURE AND ATTACH D2,D3,D4 WHERE INDICATED BY DOTS, SHAPE HOOF AND ANLKE. WITH CONNECTING WIRE CREATE PASTER, CANNON, AND FORE-ARM, AS SHOWN ON PLACEMENT SHEET FOR LEGS. REPEAT PROCESS FOR HINDLEGS.

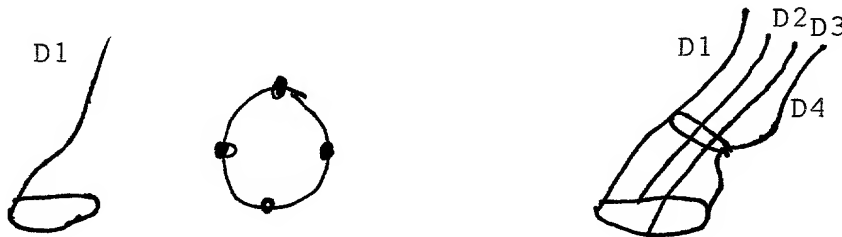

(2)

ATTACH LEGS TO BODY WHERE INDICATED BY DOTS. STUFF TIGHTLY WITH FILLER MATERIAL IN ALL AREAS, ADD YARN FOR TAIL BY TWISTING WIRE AROUND THE MIDDLE OF A 40" BUNDLE, CLIP THE ENDS, EMBROIDRY ON EYES, NOSTRILS, AND MOUTH. TO FILL IN MANE AND FORELOCK, SPLIT 4-PLY YARN IN HALF, USING A LARGE-EYED NEEDLE SEW ONTO CREST OF NECK 20" PIECES FOLDED IN HALF, TIE EACH SECTION OF STRING IN A KNOT AS CLOSE TO CREST AS POSSIBLE FROM POLL TO WITHERS.

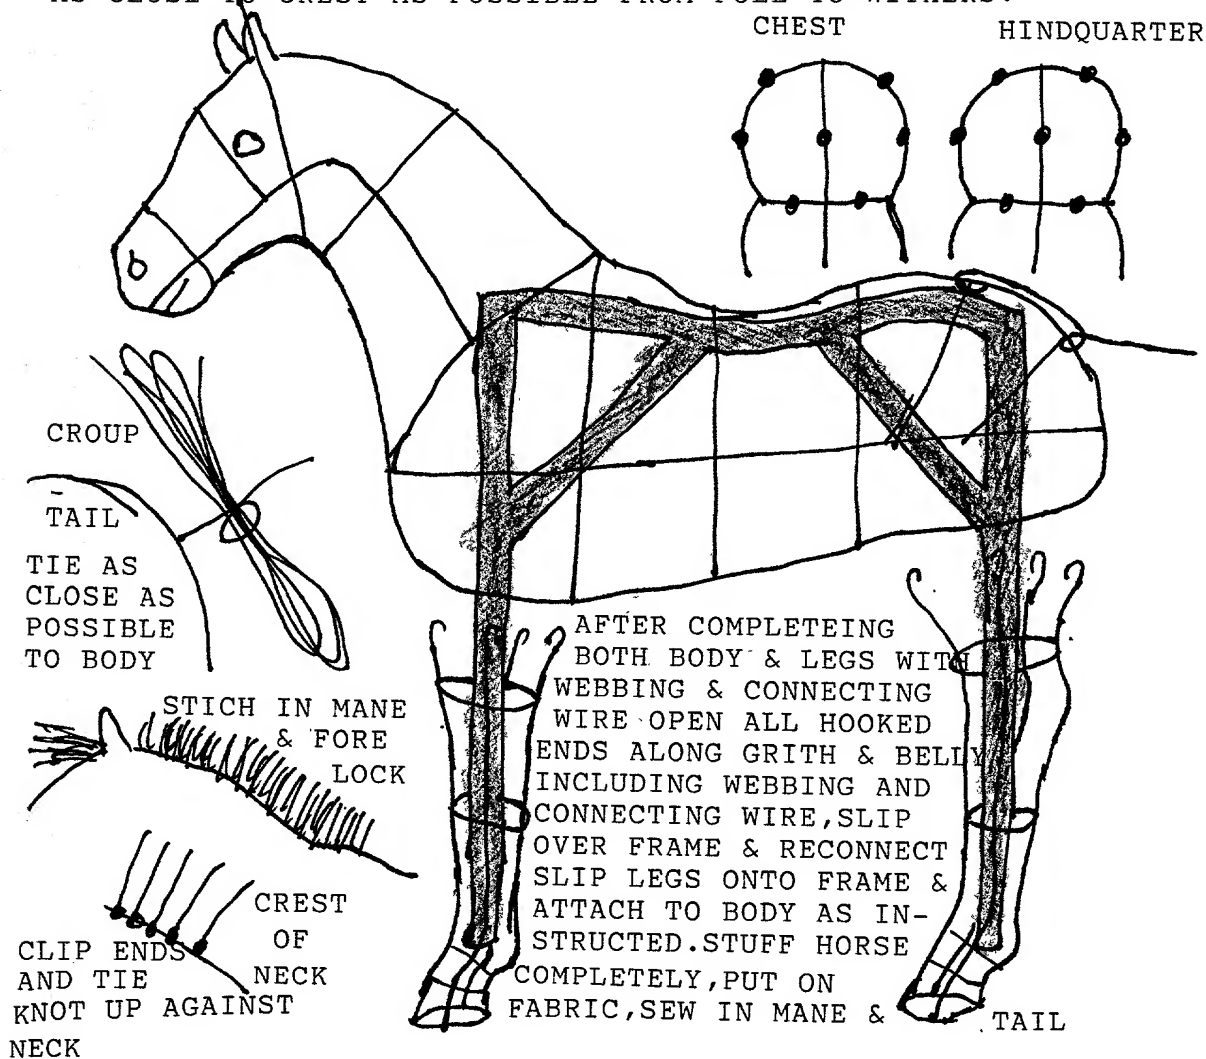


1000743-110001

ROCKERS OPTIONAL


(1)

TO ADD ROCKERS TO HORSE ON REBAR FRAME, WELD HEAD OF 16-18" HEX BOLT TO END OF LEGS. USE A 1/8" DRILL BIT ON HOLES FOR BRACES, AND A 3/8" WOOD BIT TO DRILL HOLES THROUGH BRACES TO ATTACH TO HORSE.

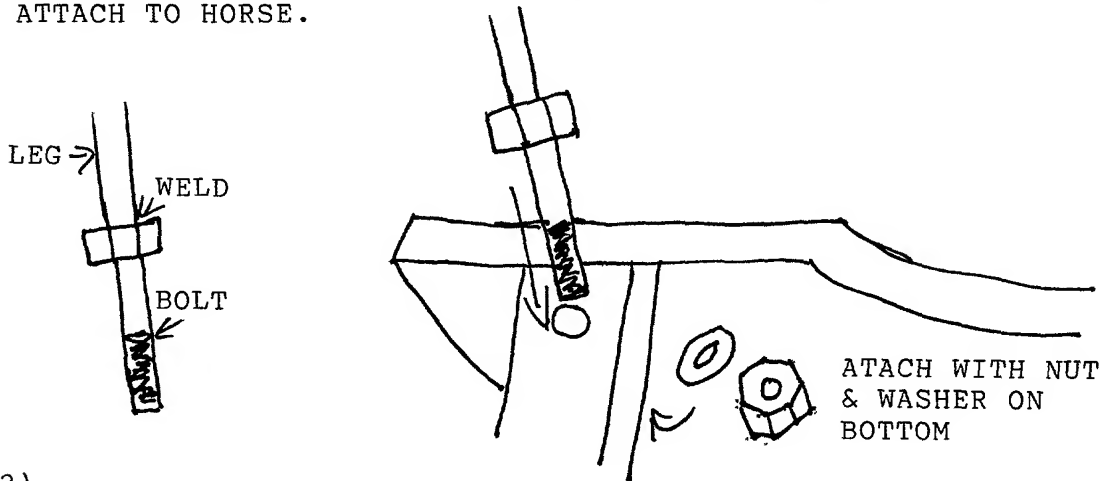


(2)

TO ADD ROCKERS TO HORSE ON WOODEN FRAME, DRILL HOLES IN ENDS OF LEGS WITH A 1/4" DRILL BIT APPROPRIATE FOR 3" LAG SCREWS 1/4" INCH DIAMETER. USE A 3/8" WOOD BIT TO DRILL HOLES THROUGH BRACES TO ATTACH TO HORSE.

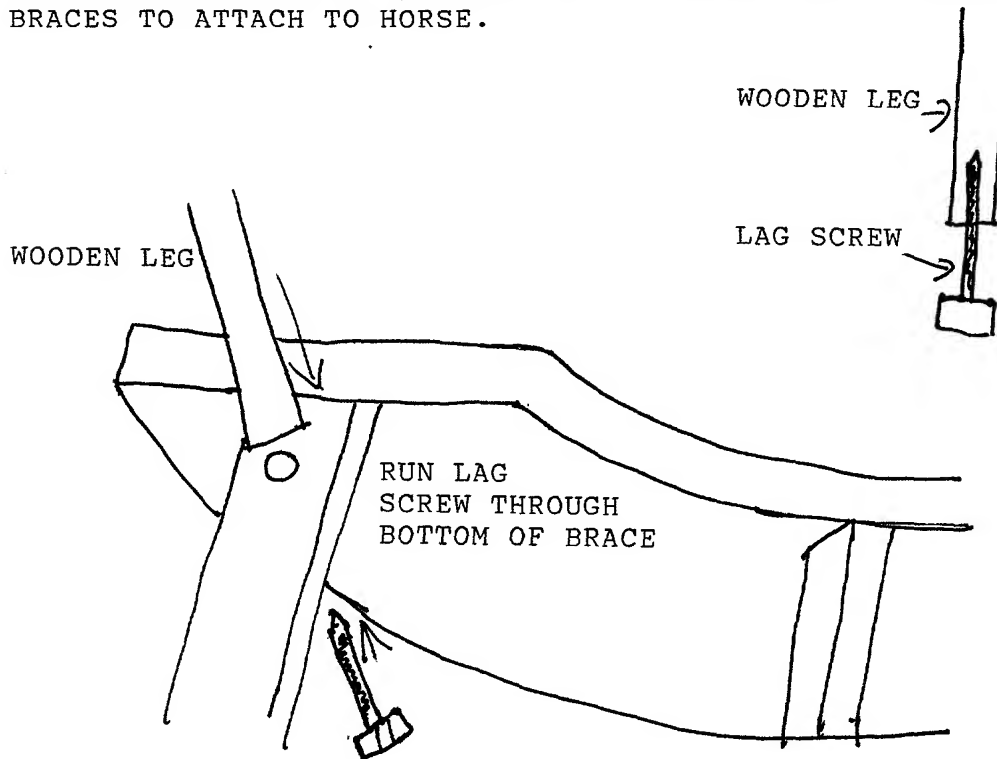


(F)

"JIM DANDY"

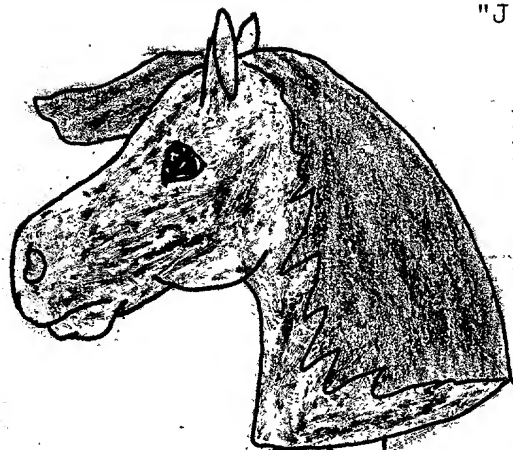

- (1)
MEASURE WIRE FOR BASE & CENTER OF HEAD.THEY ARE ONE PIECE(10AW WIRE)
- (2)
FOLD NECK & CHEEK PIECE IN HALF AND TWIST AROUND TIP OF MUZZLE.
- (3)
FOLD JOWL & EAR PIECE IN HALF,TWIST AROUND THROATLATCH & AGAIN AT CHEEK FOLD CROWN OR POLL PIECE IN HALF (6 1/2")TWIST ONTO HEAD PIECE WHERE INDICATED AND ATTACH TO EARS.
- (4)
FOLD PIECE FOR MUZZLE IN HALF AND TWIST ON AT CHIN AREA,JOIN TO EACH OF THE SIDE PIECES,FINISH WITH TOP OF NOSE.

20" DIAMETER

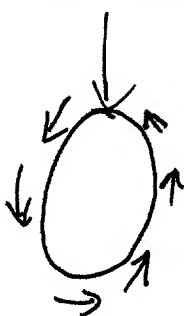

FORHEAD
10"

CROWN OR
POLL
6 1/2"

JOWL & EARS
23"

NECK
&
CHEEK
32"

BASE &
NECK 52"


MUZZLE
12"

THROAT
LATCH

OVER
VIEW
OF
CHEEK





MEASURE 1" DOWL STICK 4 & 1/2" THEN DRILL HOLES USEING 1/16 DRILL BIT.RUN A 5 3/4" PIECE OF (10AW) WIRE THROUGH HOLES,ATTACH TO BASE.




10007478-10801

(1)

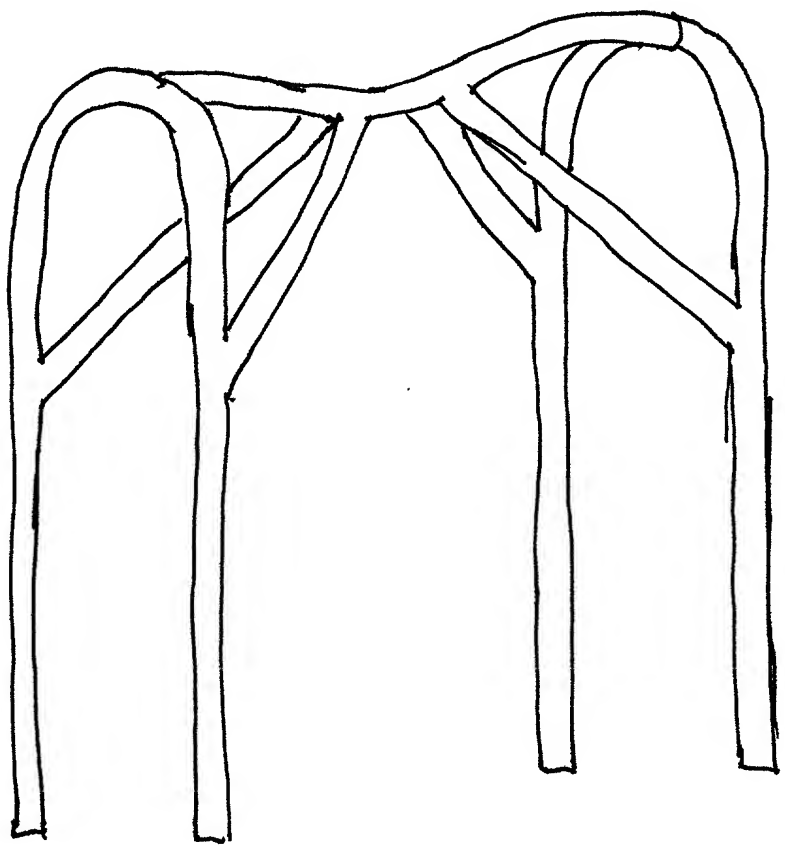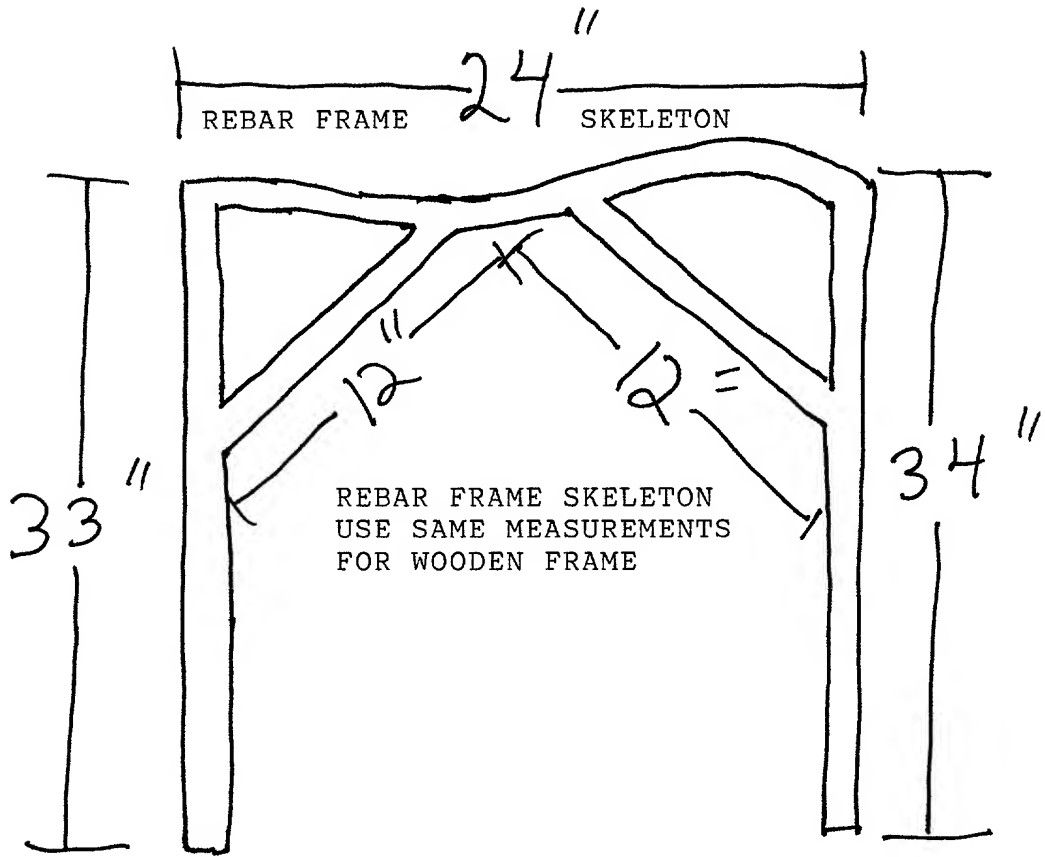

PLACEMENT OF WIRE PIECES TO TOPLINE
AND BODY ZECTIONS

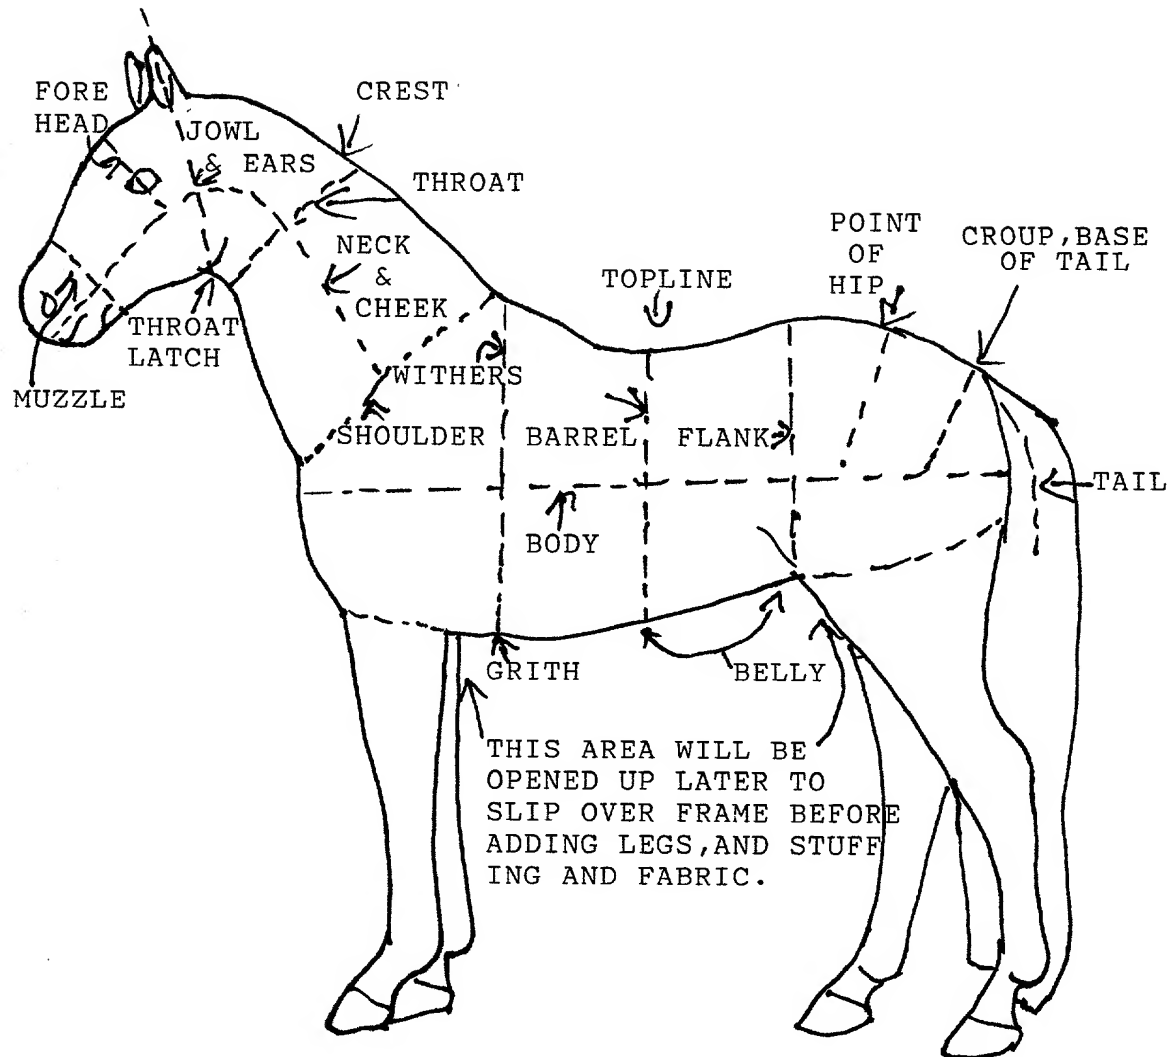

FOOT 24200T

(3)

A1




TOPLINE
137"

A2

BODY
52"


10007478-10001
T0007478-10001

(4)

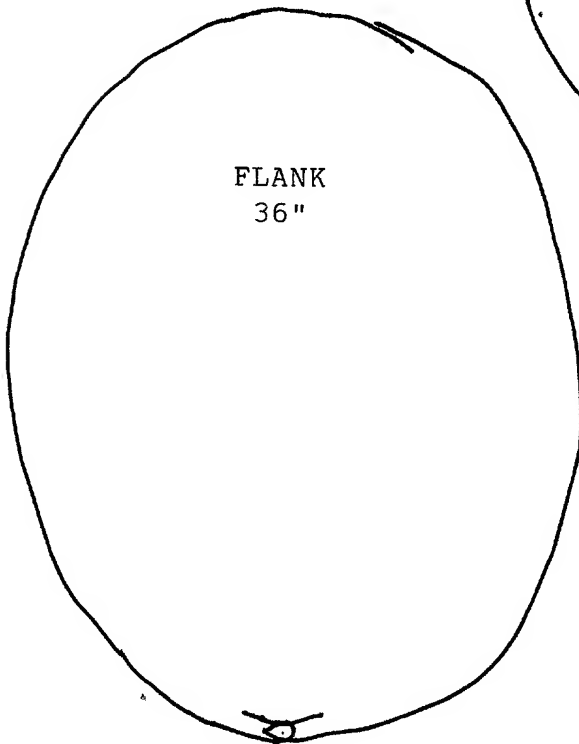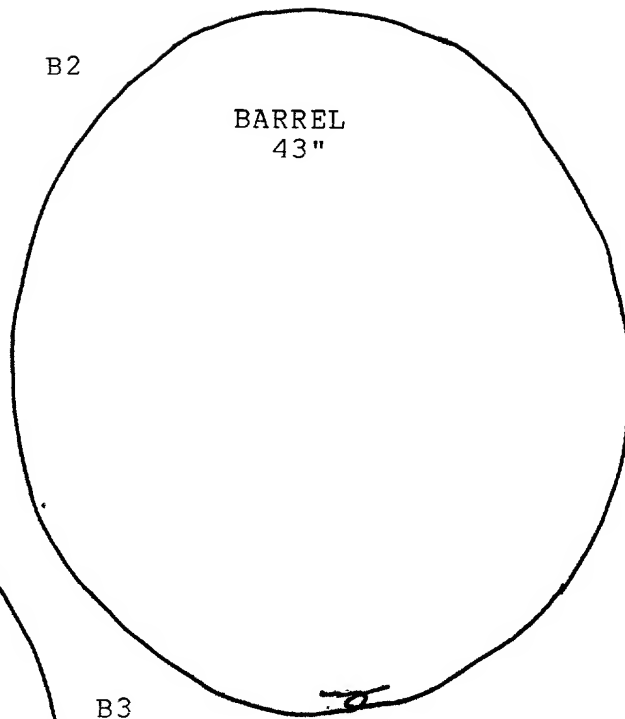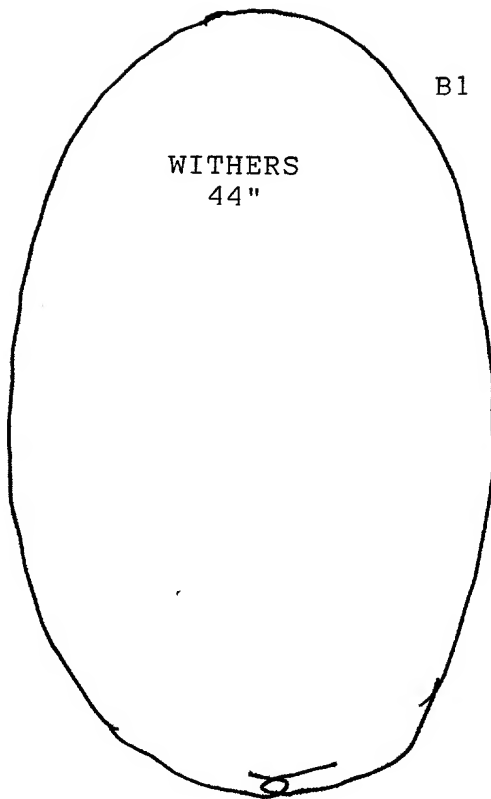


FOOT " 2440001


1000448-110801

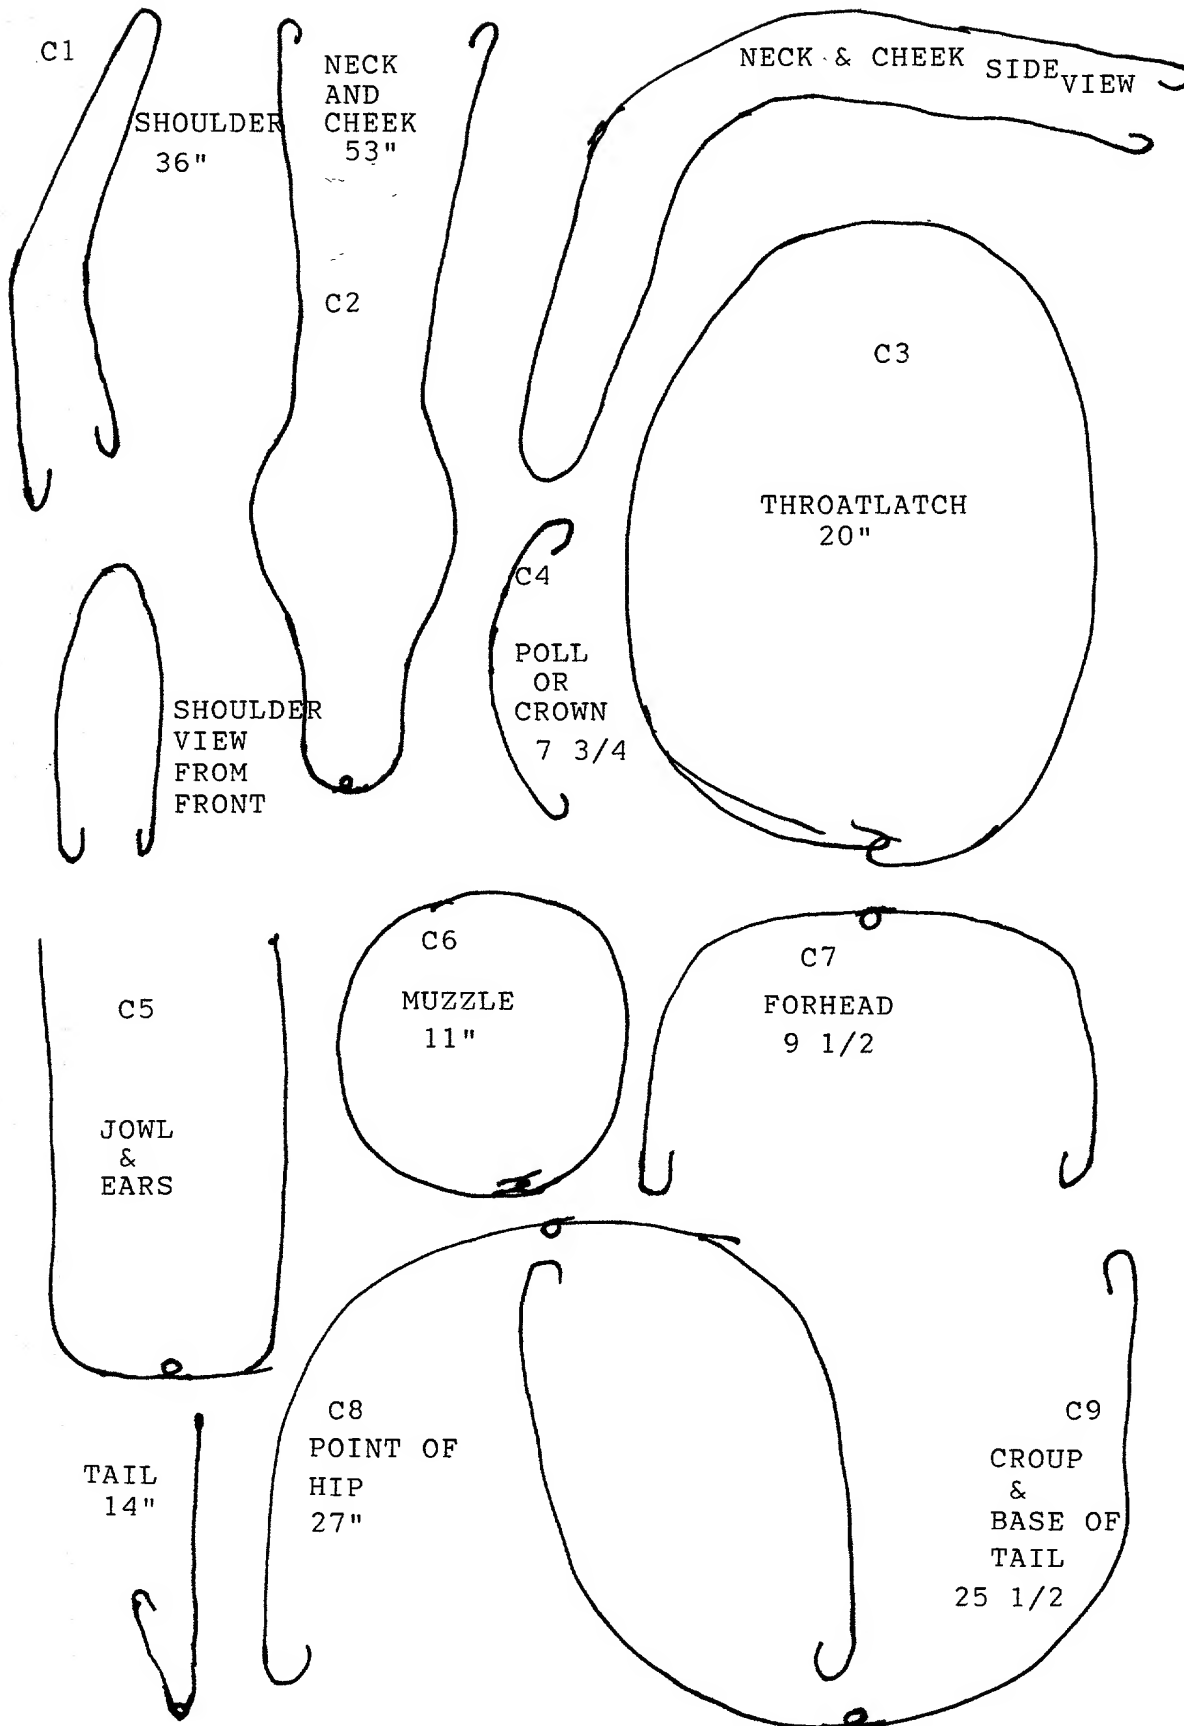

PLACEMENT SHEET

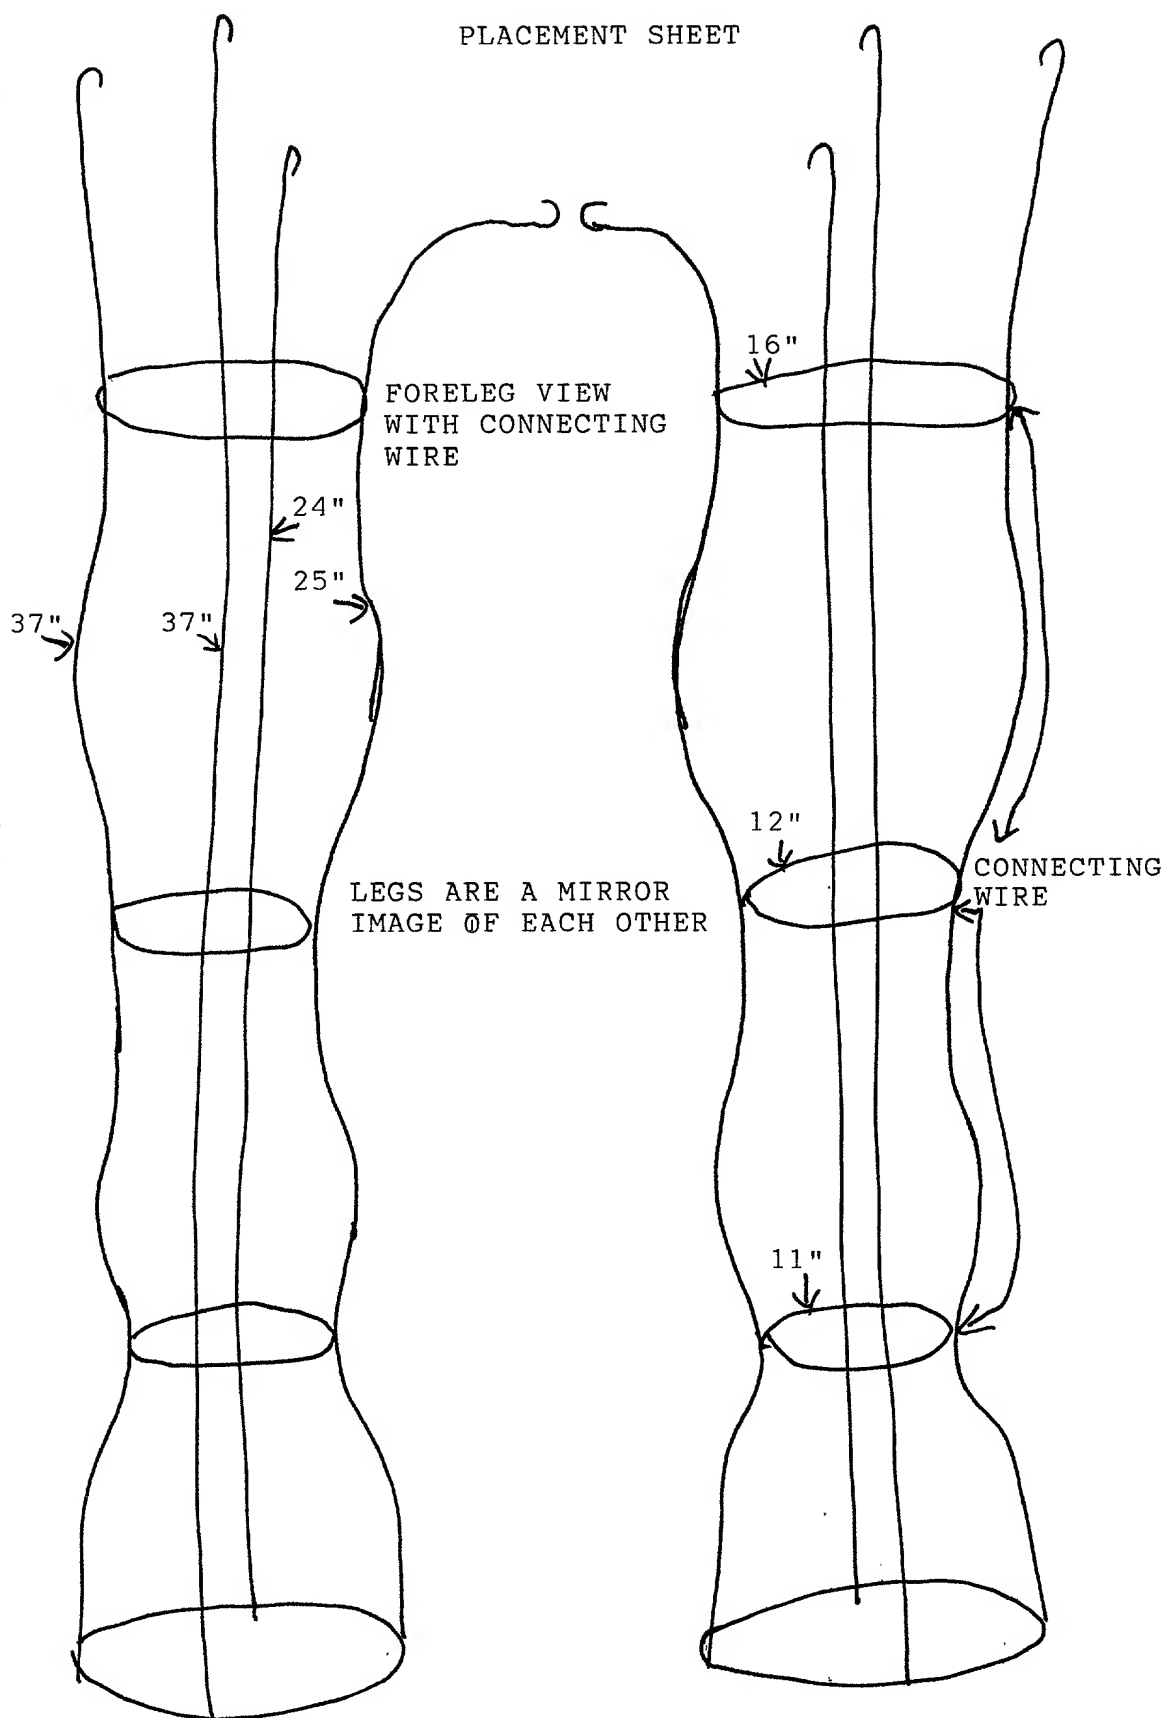

10007473-10001

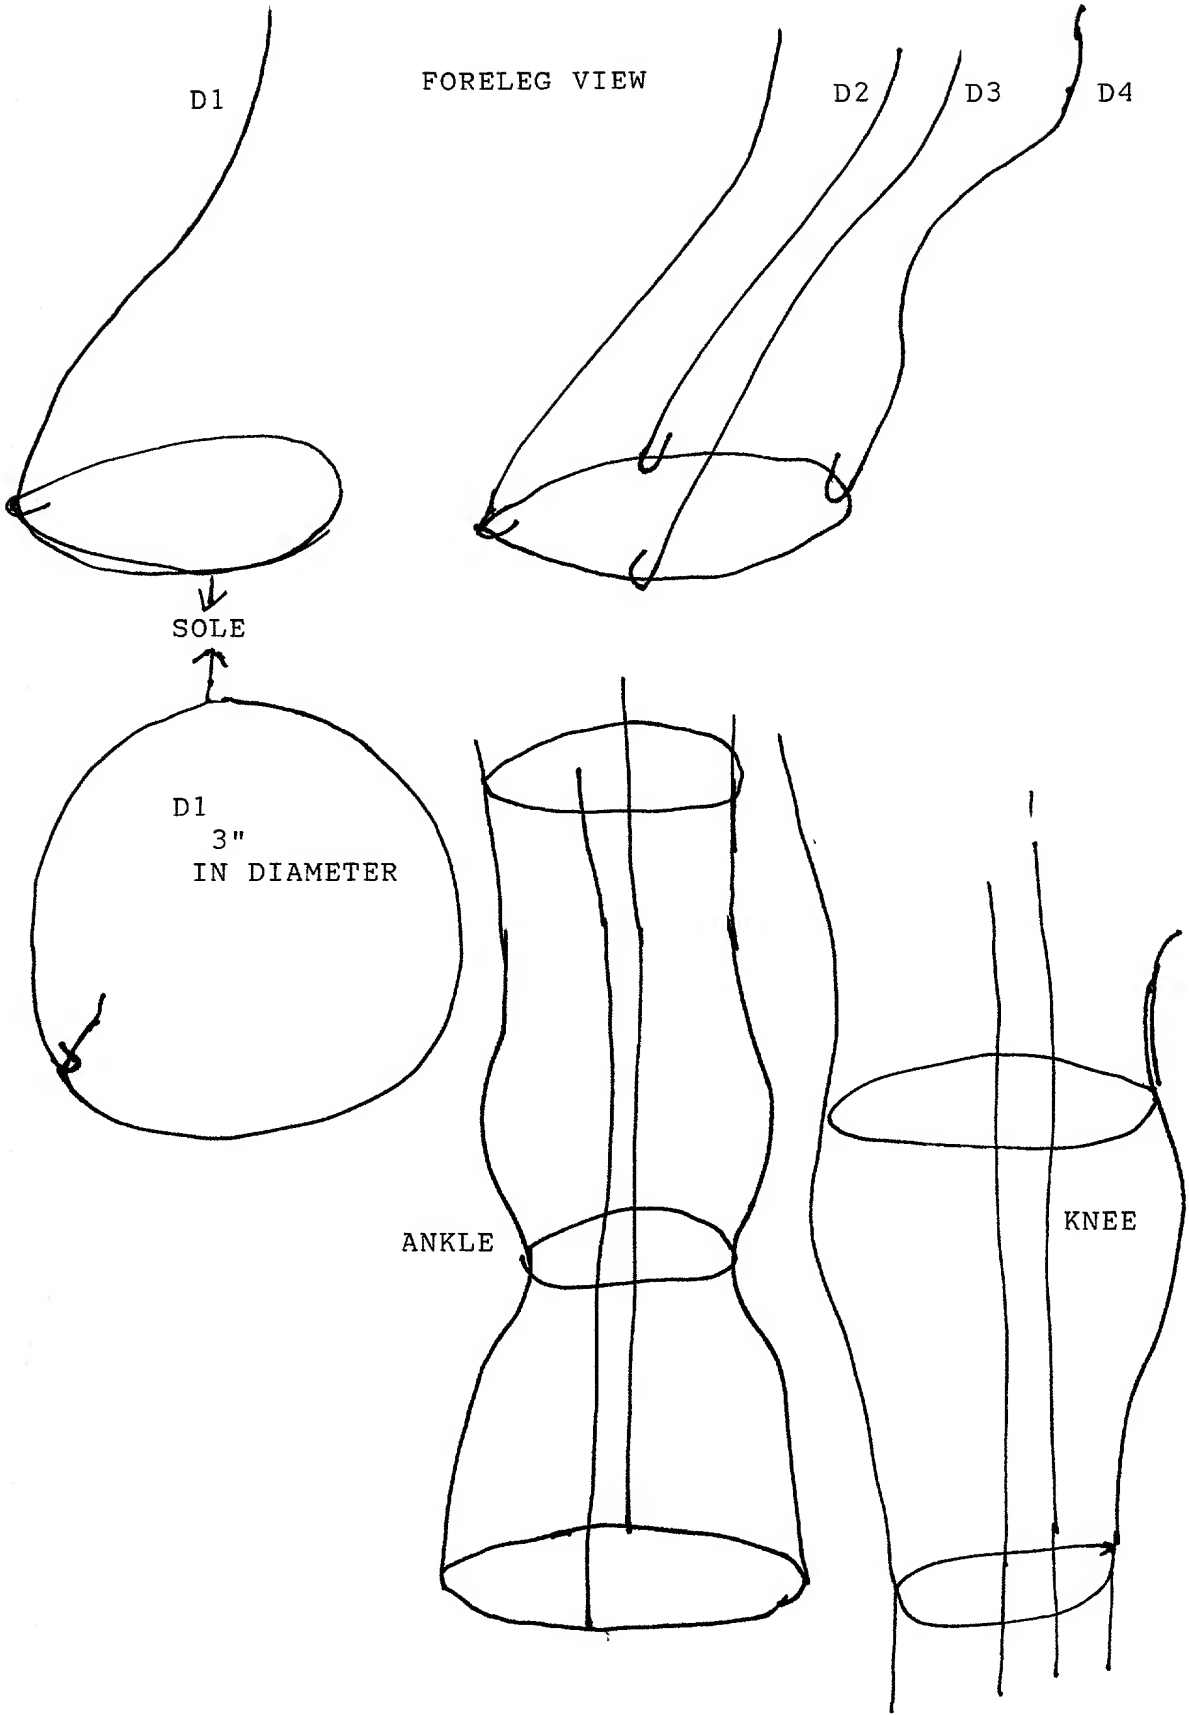


10007473-110001

PLACEMENT SHEET

HIND LEG VIEW WITH
CONNECTING WIRES


CONNECTING WIRE

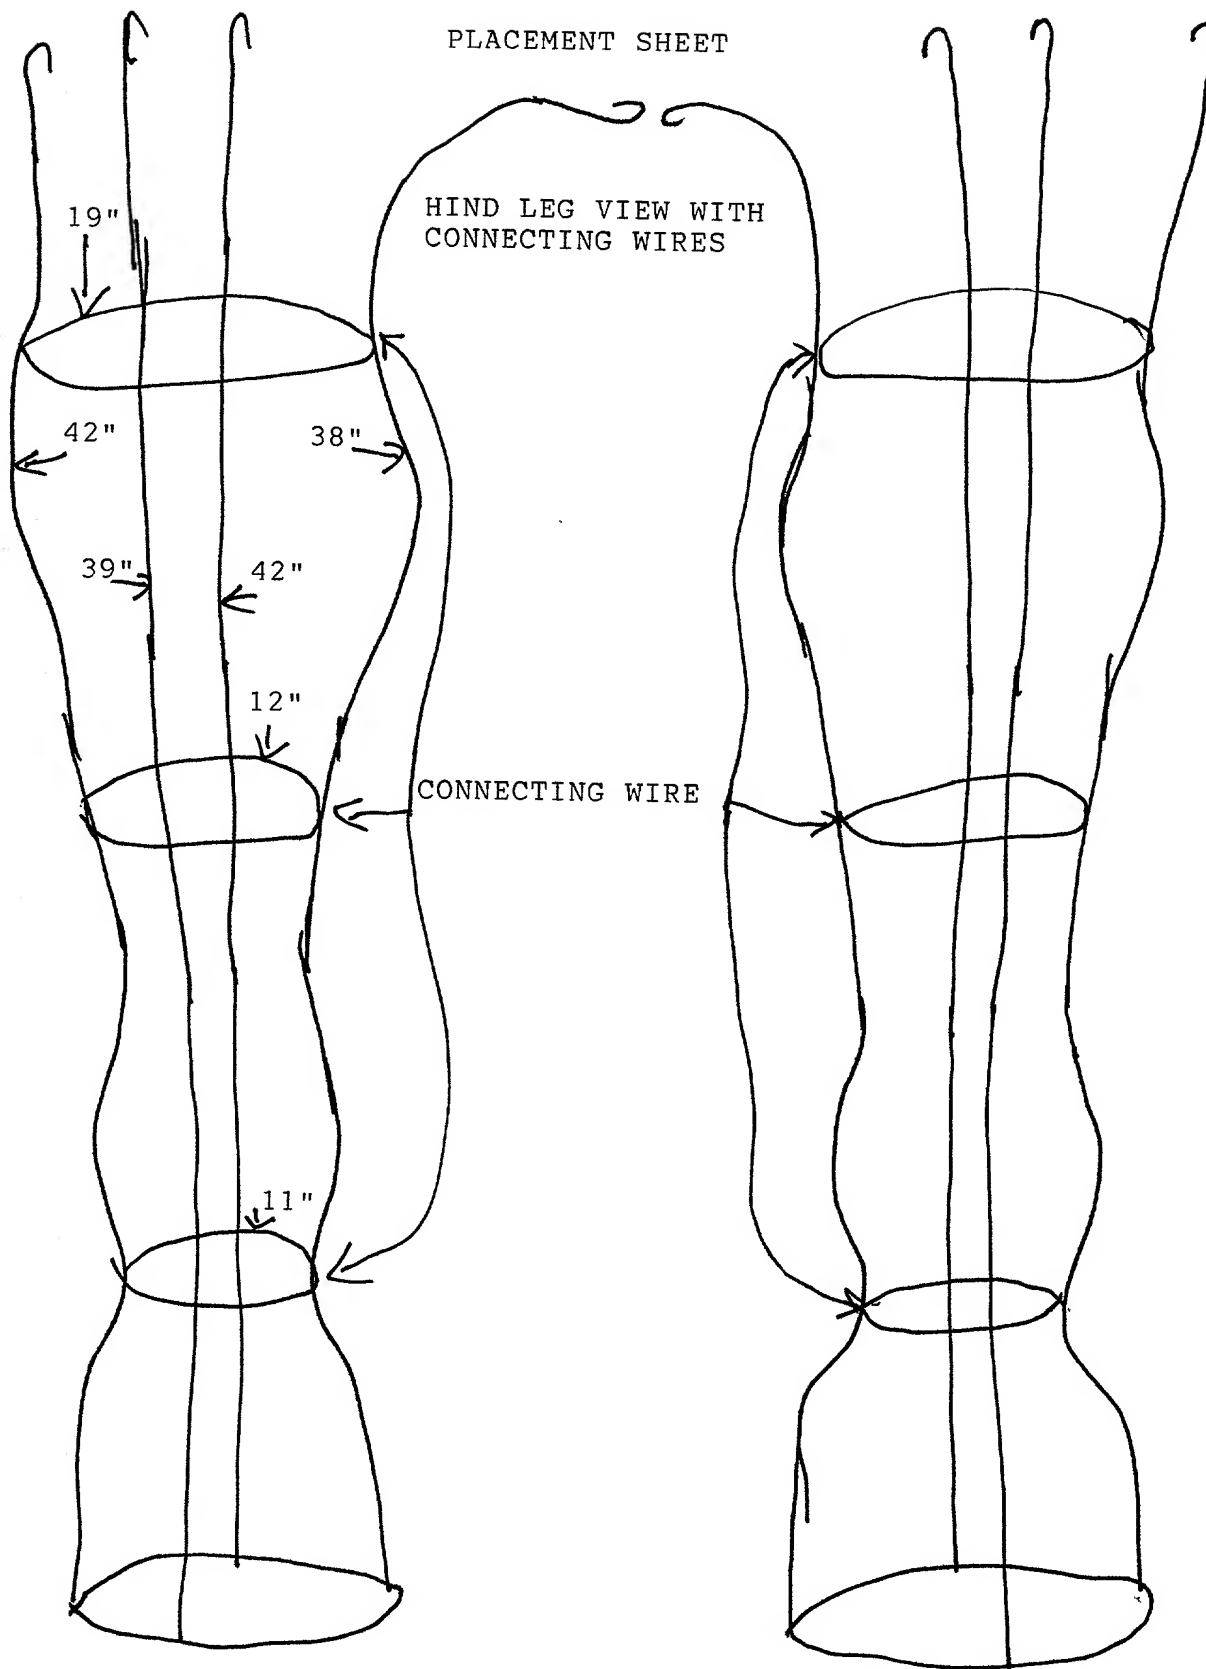



1000743-10001

1000747-110004

(9)

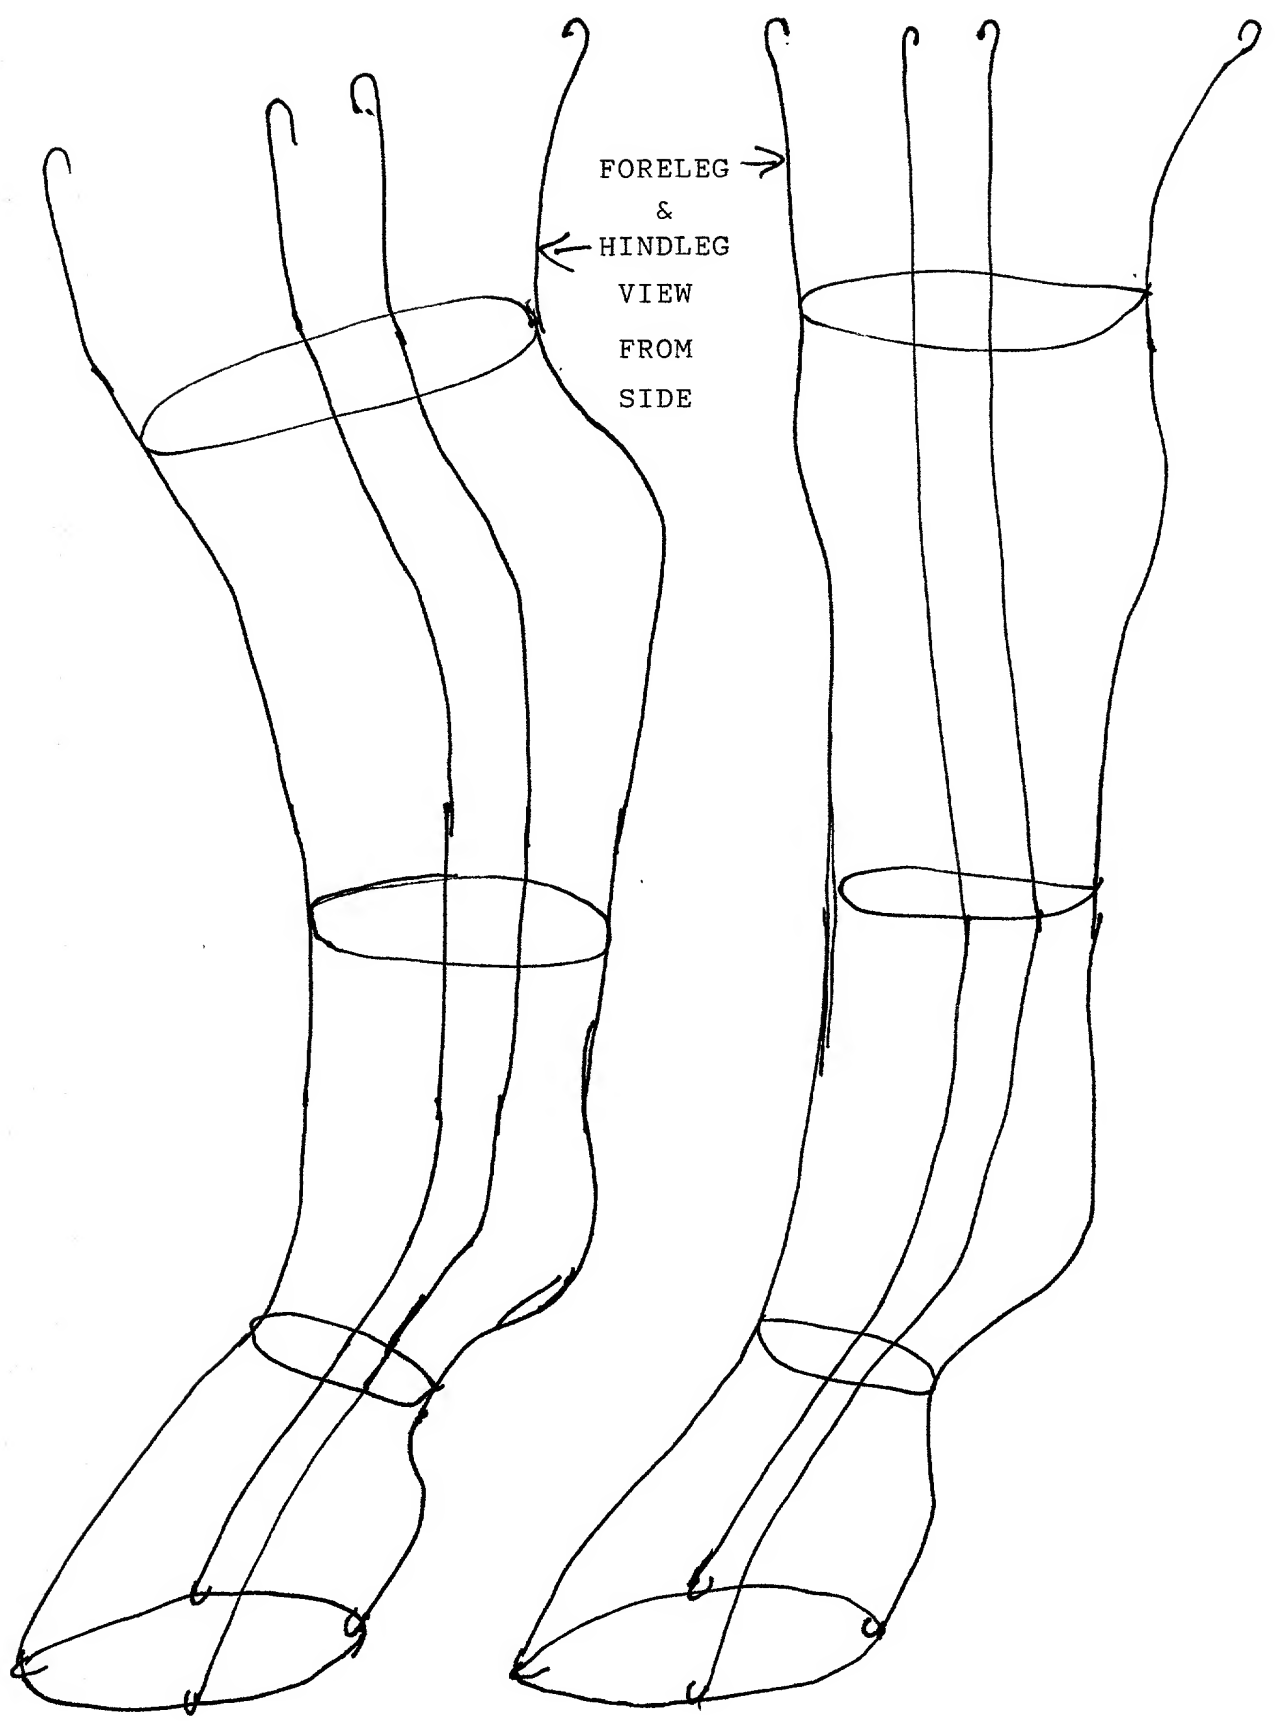

WITH OR WITHOUT
SADDLE & BRIDLES

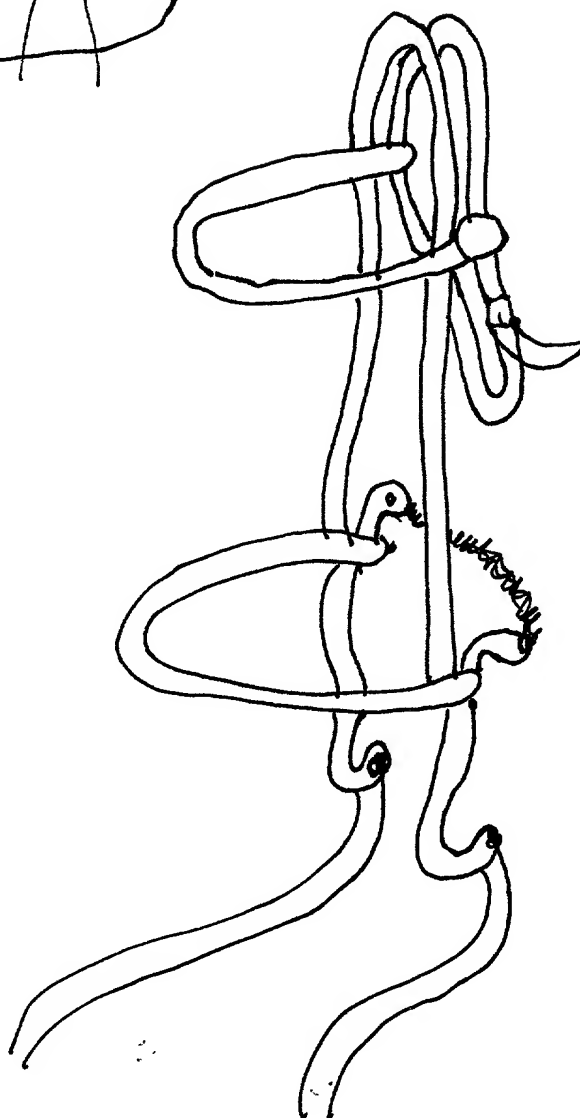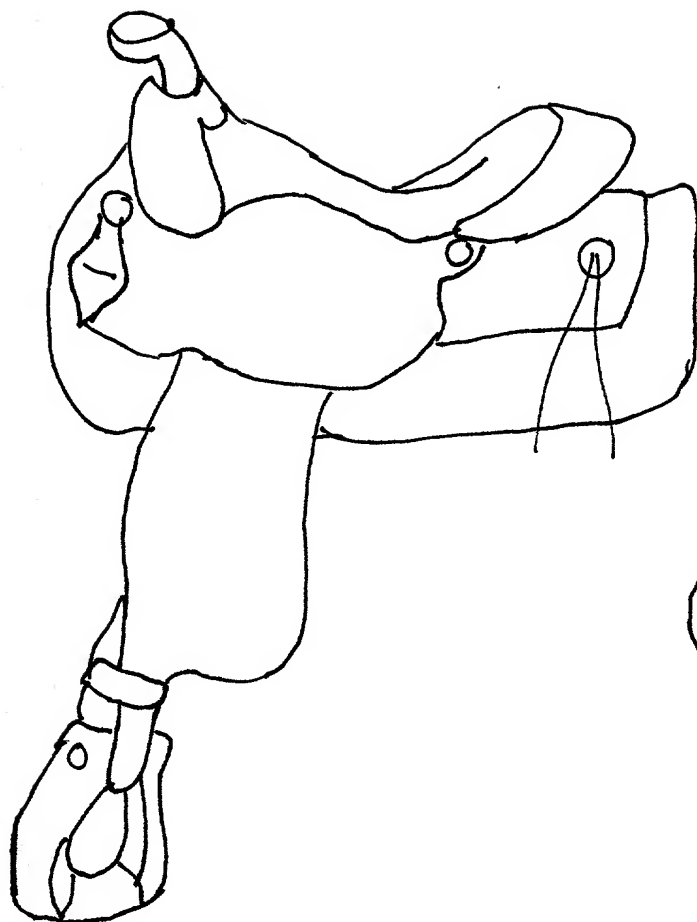

1000747-1000747

FOOT 2400T

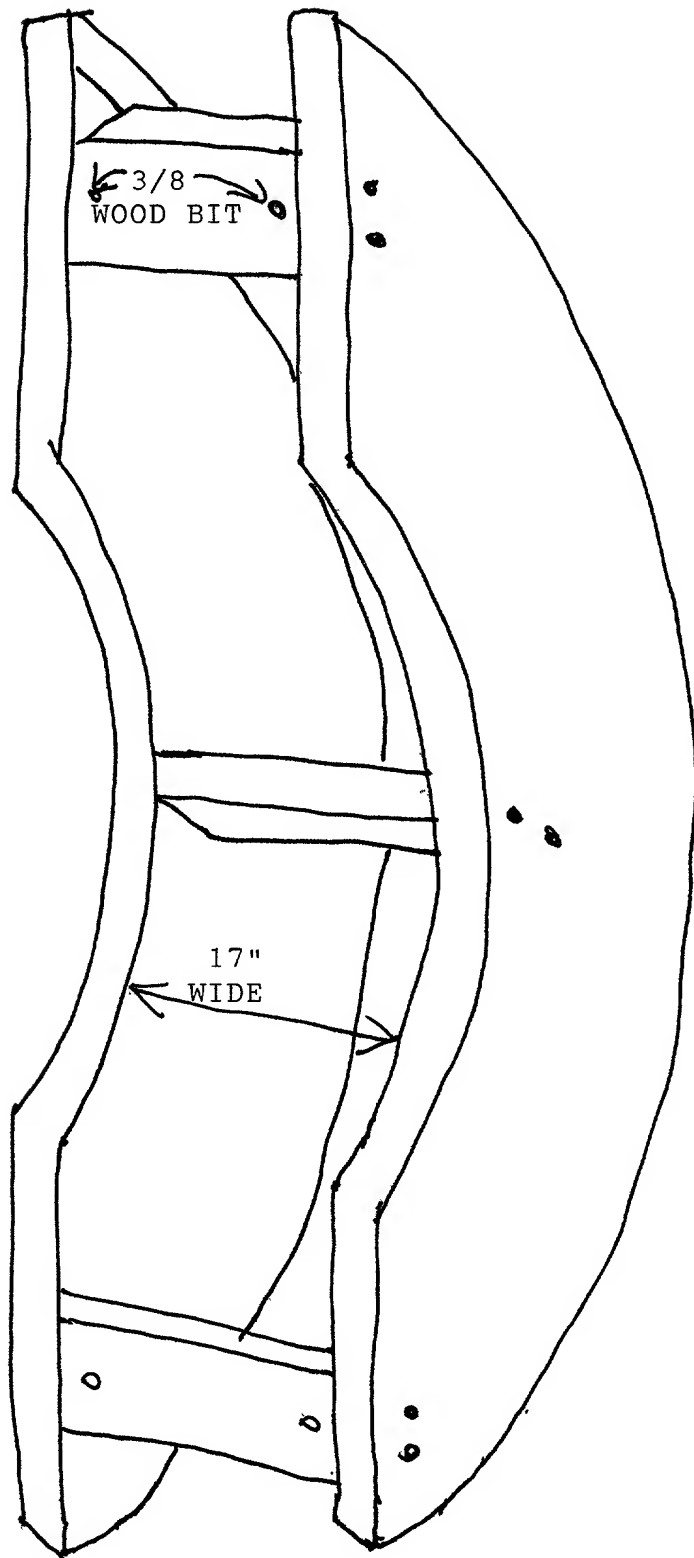
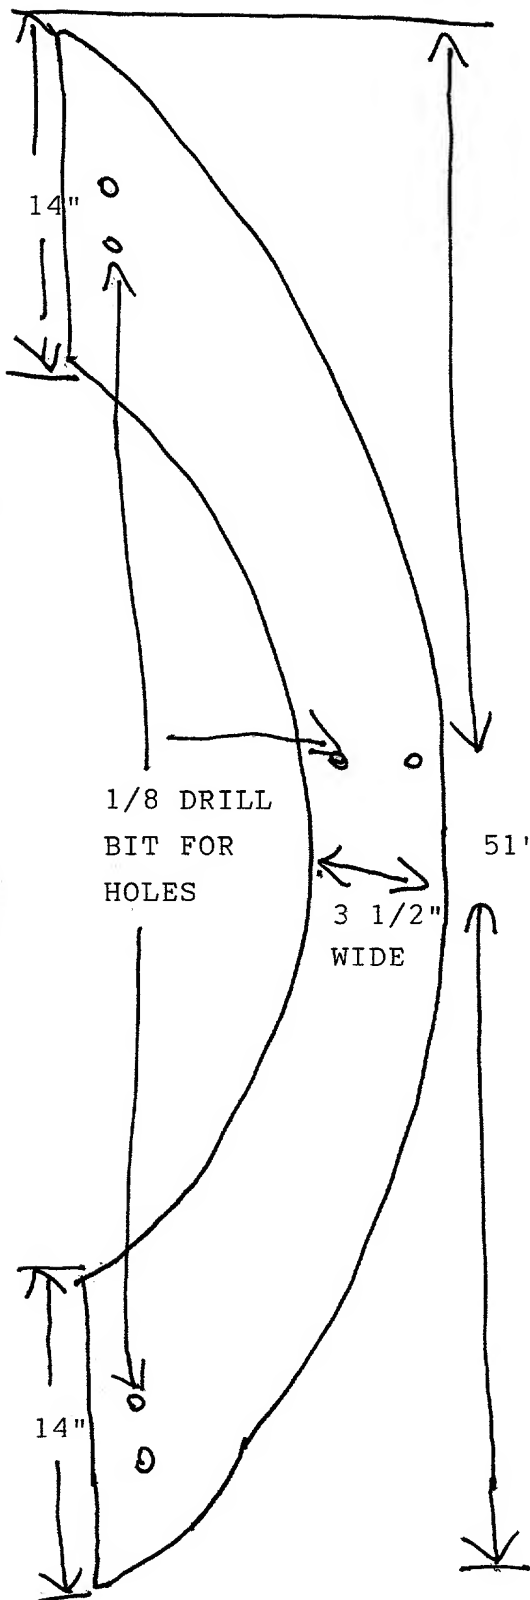



TABLE OF CONTENTS INSTRUCTIONAL GUIDE TO HORSE

*TITLE & COVER.....	A1
*DIAGRAM OF FRAME MEASUREMENTS & PLACEMENT.....	1
*DIAGRAM OF WIRE PLACEMENTS.....	2
*DIAGRAM OF BODY & TOPLINE & SHAPING.....	3
*DIAGRAM OF WITHERS,BARREL,FLANK.....	4
*DIAGRAM OF SHOULDER,REAR SECTION,MUZZLE,EARS.....	5
*FORELEG & PLACEMENT.....	6
*FORELEG & SOLE VIEW.....	7
*HINDLEG VIEW & PLACEMENT.....	8
*SIDE VIEW OF FORELEG & HINDLEG.....	9
*SADDLE & BRIDLE (WITH OR WITHOUT).....	10
*DIAGRAM & MEASUREMENTS OF ROCKERS.....	11
*STICK HORSE (JIM DANDY).....	F
*MATERIAL LIST.....	A
*INSTRUCTIONS FOR BODY SHELL.....	B
*THROAT,EARS,JOWL,FORHEAD,MUZZLE,HIP,&CROUP.....	C
*TAIL ATTACHMENT.....	D
*CONNECTING WIRE ATTACHMENT AND WEBBING.....	D
*LEG PLACEMENT.....	E
*MANE AND TAIL ATTACHMENT.....	E
*SHELL & LEG PLACEMENT ON FRAME.....	E
*ROCKER ATTACHMENT (OPTIONAL).....	E1

BOVINE

*TITLE & COVER.....	A1
*DIAGRAM OF FRAME MEASUREMENTS & PLACEMENTS.....	1
*DIAGRAM OF WIRE PLACEMENT.....	2
*DIAGRAM OF BODY & TOPLINE & SHAPEING.....	3
*DIAGRAM OF WITHERS,BARREL,FLANK.....	4
*SHOULDER,EARS,BRISKET,HORNS,NECK,MUZZLE,FORHEAD.....	5
*FORELEG VIEW & PLACEMENT.....	6
*FORELEG & AOLE VIEW.....	7
*HINDLEG VIEW WITH CONNECTING WIRE.....	8
*SIDE VIEW OF FORELEG & HINDLEG.....	9
*WITH OR WITHOUT BELLS,BULLROPE,OR FLANK STRAP.....	10
*ROCKER ATTACHMENT (OPTIONAL).....	11
*MATERIAL LIST.....	A
INSTRUCTIONS FOR BODY SHELL.....	B
*THROAT,JOWL,HORNS,MUZZLE,FORHEAD,HIP,BUTTOCK.....	C
*TAIL ATTACHMENT.....	D
CONNECTING WIRE ATTACHMENT & WEBBING.....	D
*EAR ATTACHMENT & SHAPEING.....	D
*SHELL & LEG PLACEMENT ON FRAME.....	D1
*LEGS & ATTACHMENT TO BODY.....	E
*TAIL TUFT ATTACHMENT.....	E
*ROCKER ATTACHMENT OPTIONAL.....	E2
*COLOR PHOTOGRAPHS OF ASSEMBLY PROCESS.....	F1
	&
	F2

Bovine

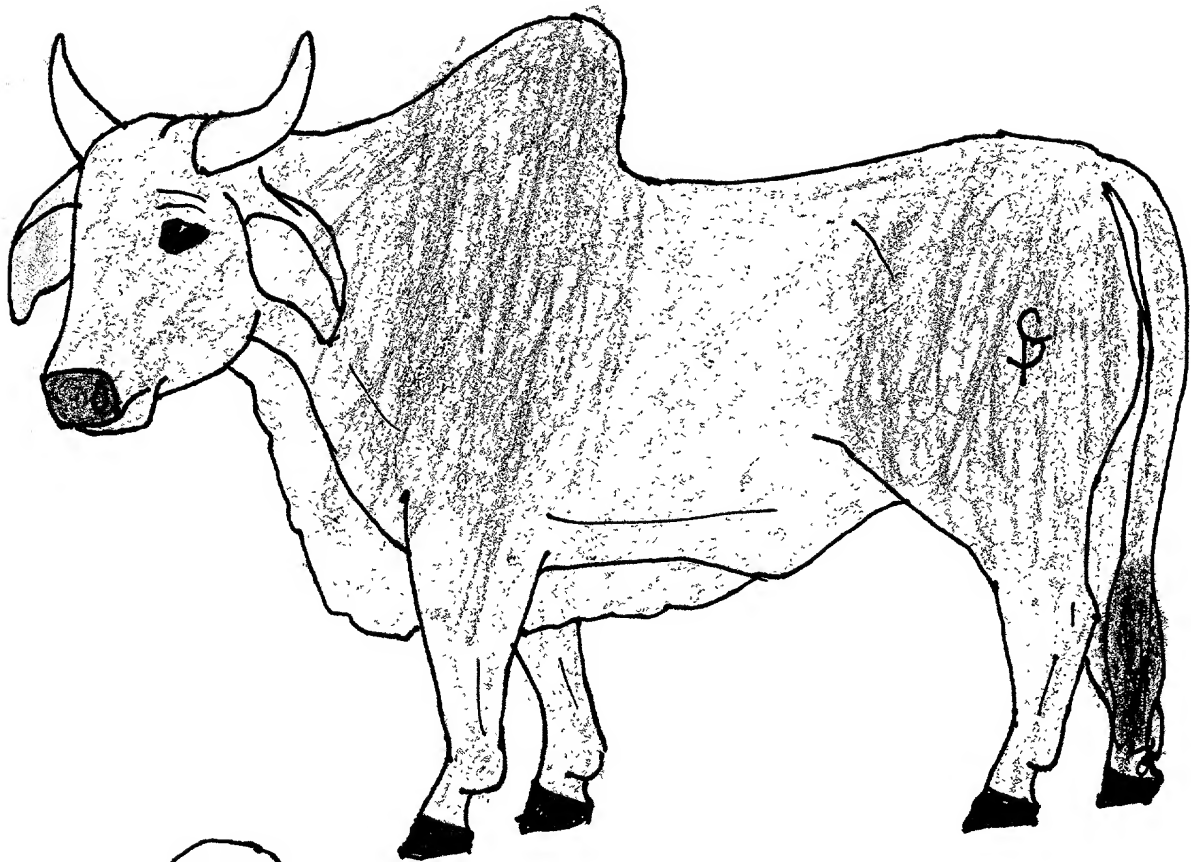

(A)

MATERIAL LIST

10 AW ELECTRICAL WIRE (FOR BODY AND LEGS)
ELECTRIC FENCEING WIRE (FOR CONNECTING WIRE)
SIX CONDUCTOR WIRE (TELEPHONE CORD)
STUFFING MATERIAL (PACKING PEANUTS,PAPER,ANY SUITABLE FILLER)
FABRIC 3 YARDS (VALOUR WORKS BEST BUT IS OPTIONAL)
YARN 1 SKIEN (FOR TAIL TUFT)
REBAR 3/4" FOR BACK AND LEGS & 1/2" FOR BRACES
OR
MOP HANDLES 1" IN DIAMETER
2X6 BOARD FOR ROCKERS
2X4 BOARD CAN BE USED FOR BACK WITH MOP HANDLES (WOODEN FRAME)
(5/16 BOLTS (HEX) TO SECURE BULL TO ROCKERS
4 (OR
(3" LAG SCREWS (TO USE WITH WOODEN FRAME)
(ALSO 3" LAG SCEWS TO PUT FRAME TOGETHER) (WOODEN)


10007478 110801

(B)

(1)

MEASURE WIRE TOPLINE,CONNECT ENDS TOGETHER,CREATE SHAPE.

HOOKED ENDS

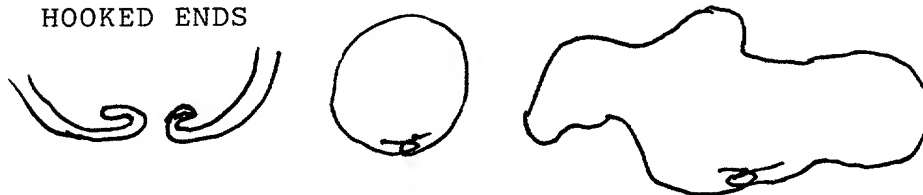


(2)

MEASURE WIRE FOR BODY,FOLD IN HALF,TWIST ONTO TOPLINE AT THE THIGH AREA,SQUEEZE HOOKED ENDS ONTO CHEST,SHAPE BODY.

THIGH

CHEST


ATTACH HERE

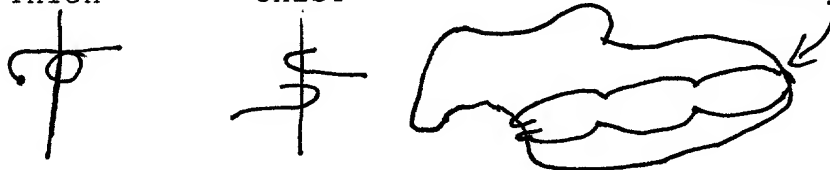

(3)

MEASURE 3-5,FOLD IN HALF,TWIST ONTO TOPLINE,FOLD IN HALF AGAIN TWIST ONTO SIDE PIECES TO CONNECT BODY TO TOPLINE AND CREATE START OF RIB CAGE,CONNECT HOOKED ENDS TO GRITH & BELLY.

TOPLINE

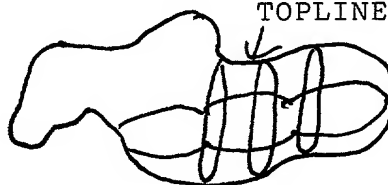

(4)

TO MAKE SHOULDERS & HUMP,FOLD IN HALF AND TWIST ONTO TOPLINE WHERE INDICATED,CONNECT ONTO BODY AT POINT OF SHOULDERS.

POINT OF SHOULDERS

TOPLINE



(5)

MEASURE NECK & CHEEK PIECE,FOLD IN HALF,TWIST ONTO MUZZLE TIP WHERE UPPER LIP WILL BE,CONNECT TO SHOULDER WITH HOOKED ENDS.

TIP OF
MUZZLE


SHOULDER



(C)


(6)

FOR THROAT, FOLD WIRE IN HALF, TWIST ONTO CREST OF NECK. TWIST AROUND NECK & CHEEK PIECES, CONNECT TO THROATLATCH WITH HOOKED ENDS.

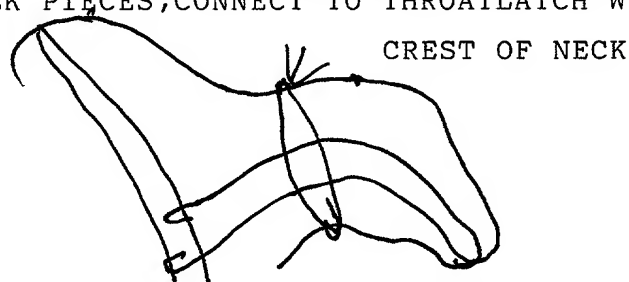


(7)

MEASURE JOWL AND FOLD IN HALF, TWIST ON AT THROATLATCH, AND CONNECT TO CHEEK WITH HOOKED ENDS, ADD HORNS BY FOLDING WIRE IN HALF & TWIST ONTO CENTER WIRE OF HEAD, THEN USE THE 8" PIECE OF WIRE TO CONNECT HORNS TO JOWL AS INDICATED.

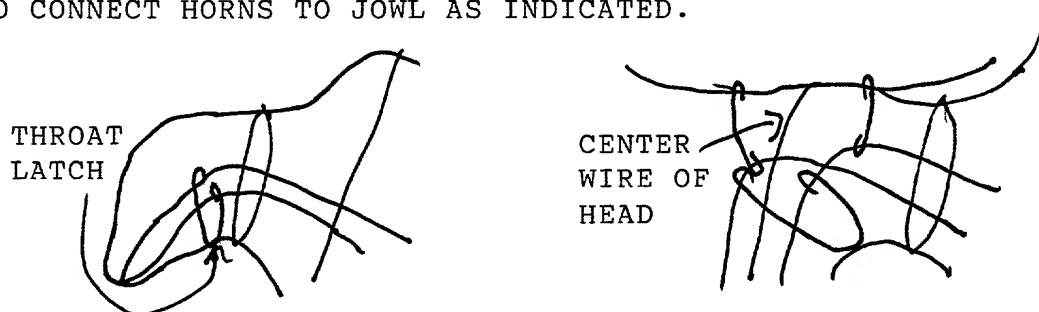

(8)


FOLD FORHEAD IN HALF, TWIST ONTO CENTER WIRE OF HEAD, SHAPE AND ATTACH TO CHEEKS WITH HOOKED ENDS.

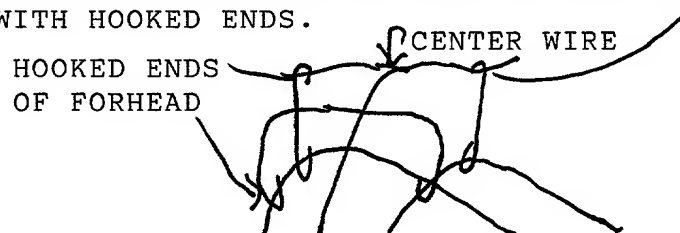

(9)

FOR MUZZLE FOLD IN HALF, ATTACH TO BRIDGE OF NOSE, TWIST AROUND CHEEK PIECES, CONNECT TO CHIN WITH HOOKED ENDS.

BRIDGE OF NOSE

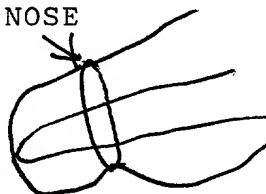


(10)

TAKE PIECE FOR POINT OF HIP, FOLD IN HALF, ATTACH TO TOPLINE BY TWISTING ON, ATTACH TO BODY WITH HOOKED ENDS, DO THE SAME WITH BUTTOCK PIECE.

POINT OF HIP


BUTTOCK

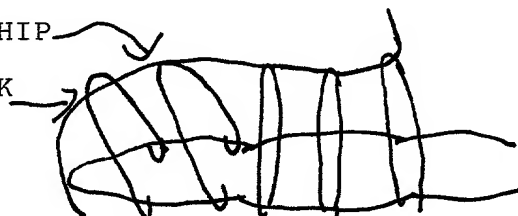

(11)


TO ATTACH TAIL TO BODY, MEASURE ABOUT FOUR INCHES & FOLD, TWIST ONTO TOPLINE JUST BELOW BUTTOCK & ATTACH TO POINT OF HIP.

10007428-10007

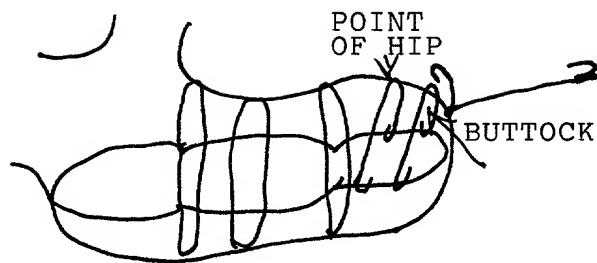

(12)


TO MAKE SHELL USE CONNECTING WIRE AT 4" INTERVALS, THIS SHOULD PRODUCE SQAURES OVER WHOLE BODY, BY TWISTING AROUND EACH PART OF BODY TO SECURE AND FORM MUSCLE & TONE.

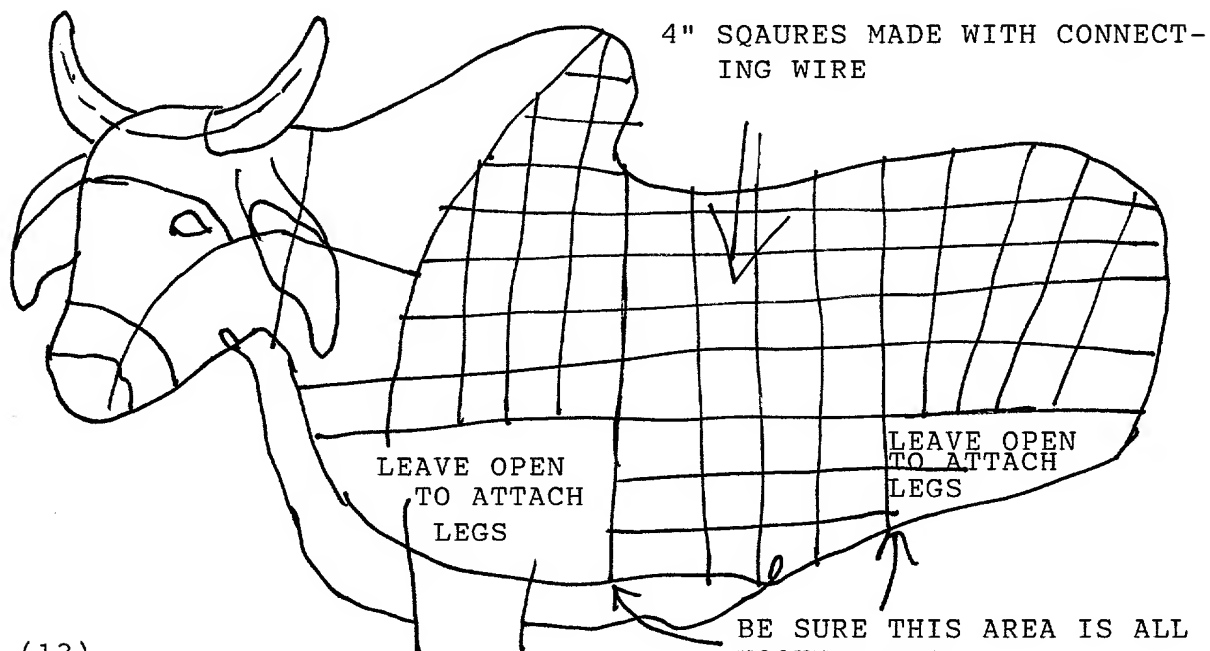

(13)


TO MAKE WEBBING, USE TELEPHONE CORD (STRIPPED OF OUTER LAYER) TIE ONTO SHELL ANYWHERE TO START, TWIST AROUND BOTH CONNECTING WIRE & BODY PIECES AT 1" INTERVALS ALL OVER BODY UNTIL YOU HAVE 1" SQAURES COVERING SHELL COMPLETELY, DO THE SAME WITH LEGS

STRIP THIS OFF

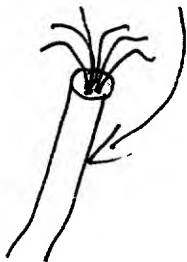

1" WEBBING


4" SQAURE

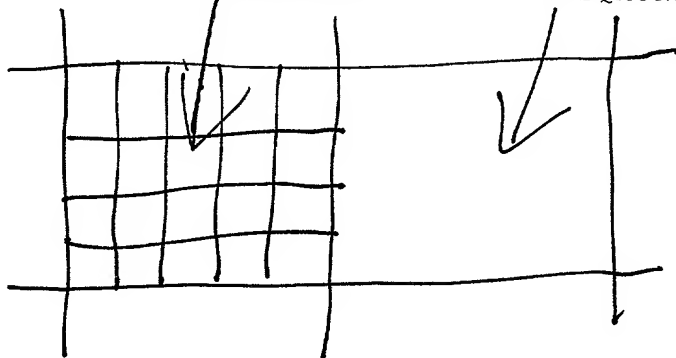

(D1)


(14)

TO DO THE EARS, FOLD THE WIRE AND ATTACH A HOOKED END ABOUT 3 1/2" FROM THE OTHER END AND SHAPE THE EAR, BEND AGAIN AND TWIST AROUND CHEEK PIECE 2" BELOW HORN THEN ATTACH HOOKED END TO POLL PIECE BY HORN, JOIN BACK OF EAR AT EAR TIP AND BASE WITH HOOKED ENDS.

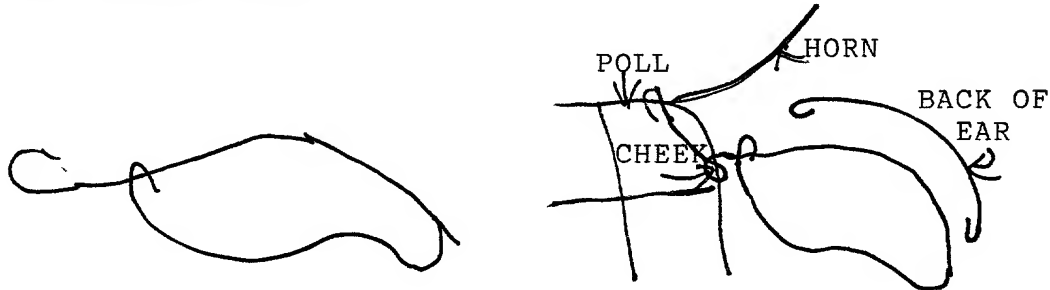

(15)

AFTER COMPLETEING BODY & LEGS WITH CONNECTING WIRE & WEBBING OPEN ALL HOOKED ENDS ALONG GRITH & BELLY, INCLUDING WEBBING & CONNECTING WIRES, SLIP OVER FRAME & RECONNECT WIRE. SLIP COMPLETED LEGS ONTO FRAME AND ATTACH TO BODY AS INSTRUTED ON PAGE FOR CONSTRUTING LEGS PARAGRAPH (2). STUFF BULL COMPLETELY AND ADD BRISKET ON CHIN & GRITH, PUT ON FABRIC BEFORE ATTACHING TO ROCKERS. SEW FABRIC ON BY FOLDING LONG WAYS, PINING UP & DOWN BODY, LEGS, AND NECK WITH A HIDDEN STITCH WITH MATCHING THREAD. ADD TAIL TO FINISH.

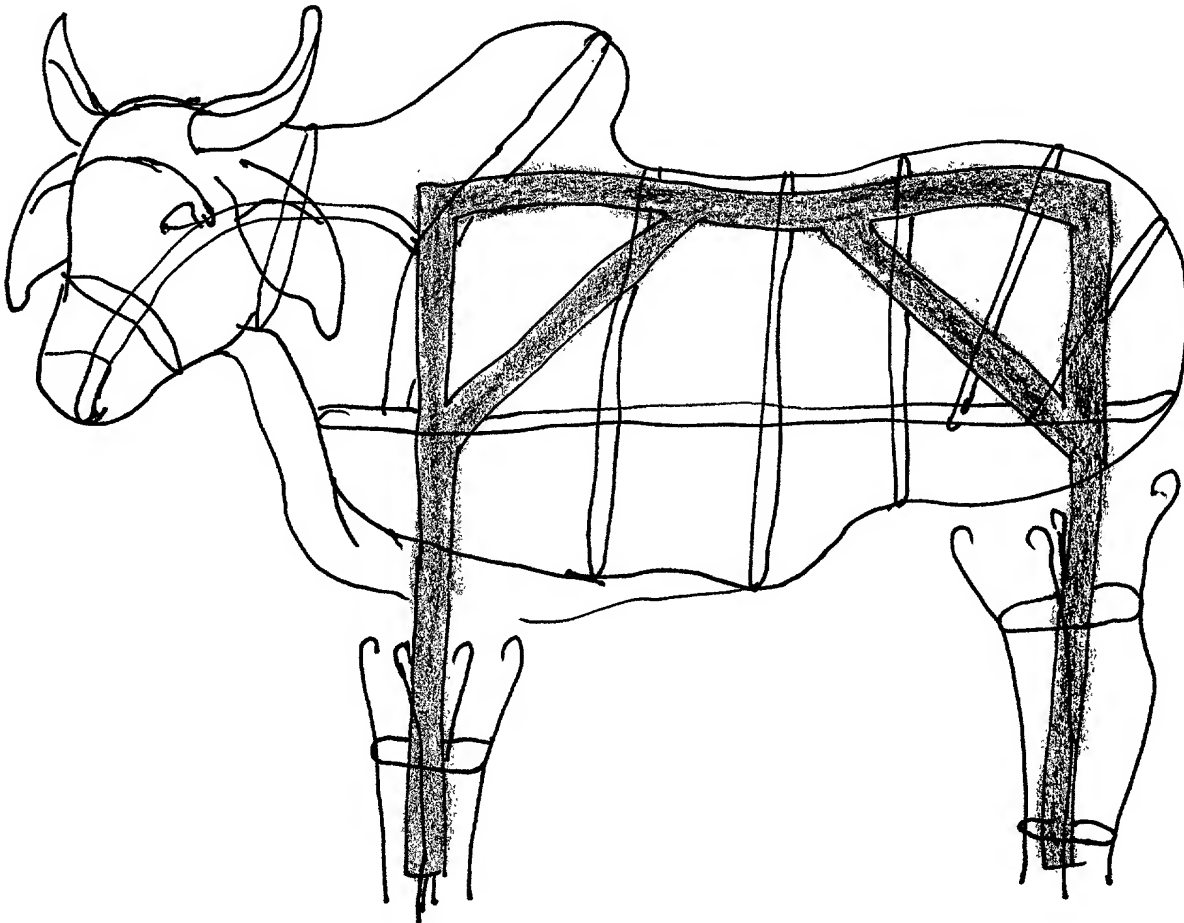


FOOT 342000T

(E)

LEGS


(1)

START WITH FRONT OF LEG & SOLE OF HOOF (D1), SHAPE AS INDICATED MEASURE AND ATTACH D2,D3,D4 WHERE INDICATED BY DOTS, SHAPE HOOF AND ANKLE. WITH CONNECTING WIRE CTEATE PASTER, CANNON, & FOREARM AS SHOWN ON PLACEMENT SHEET FOR LEGS, REPEAT PTOCESS FOR HINDLEG

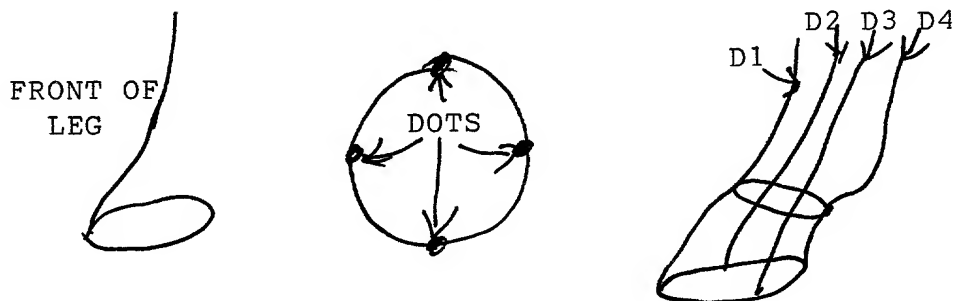

(2)

ATTACH LEGS TO BODY WHERE INDICATED BY DOTS, STUFF TIGHTLY WITH FILLER MATERIAL IN ALL AREAS, THEN ADD YARN TO TAIL BY TWISTING WIRE AROUND THE MIDDLE OF A 12" BUNDLE, CLIP THE ENDS, ADD BRISKET BY HOOKING X1 ON AT CHIN AND X2 ON AT HOOKED ENDS OF BARREL. WITH BRACEING TO HOLD IN PLACE, COVER WITH FABRIC, EMBROIDRY ON EYES, NORSTILS, & MOUTH.

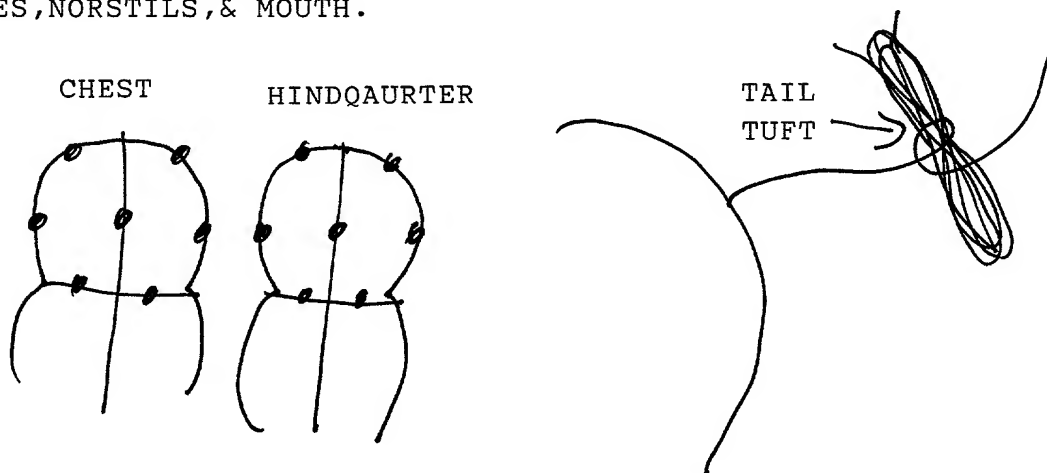


1007473-10001

ROCKERS OPTIONAL


(1)

TO ADD ROCKERS TO BULLON REBAR FRAME WELD HEAD OF 16-18" HEX BOLT TO END OF LEGS TO ATTACH ROCKERS. USE A 1/8" DRILL BIT ON HOLES FOR BRACES AND A 3/8" WOOD BIT TO DRILL HOLES THROUGH BRACES TO ATTACH TO BULL.


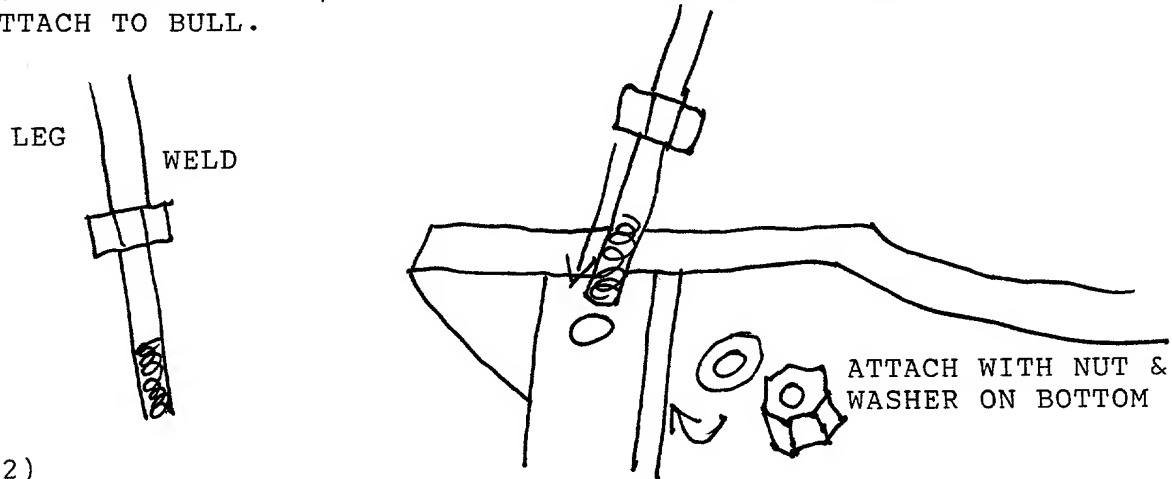


(2)

TO ADD ROCKERS TO BULL ON WOODEN FRAME, DRILL HOLES IN ENDS OF LEGS WITH A 1/4" DRILL BIT APPROPRIATE FOR 3" LAG SCREWS 1/4" IN DIAMETER. USE A 3/8" WOOD BIT TO DRILL HOLES THROUGH BRACES TO ATTACH TO BULL.

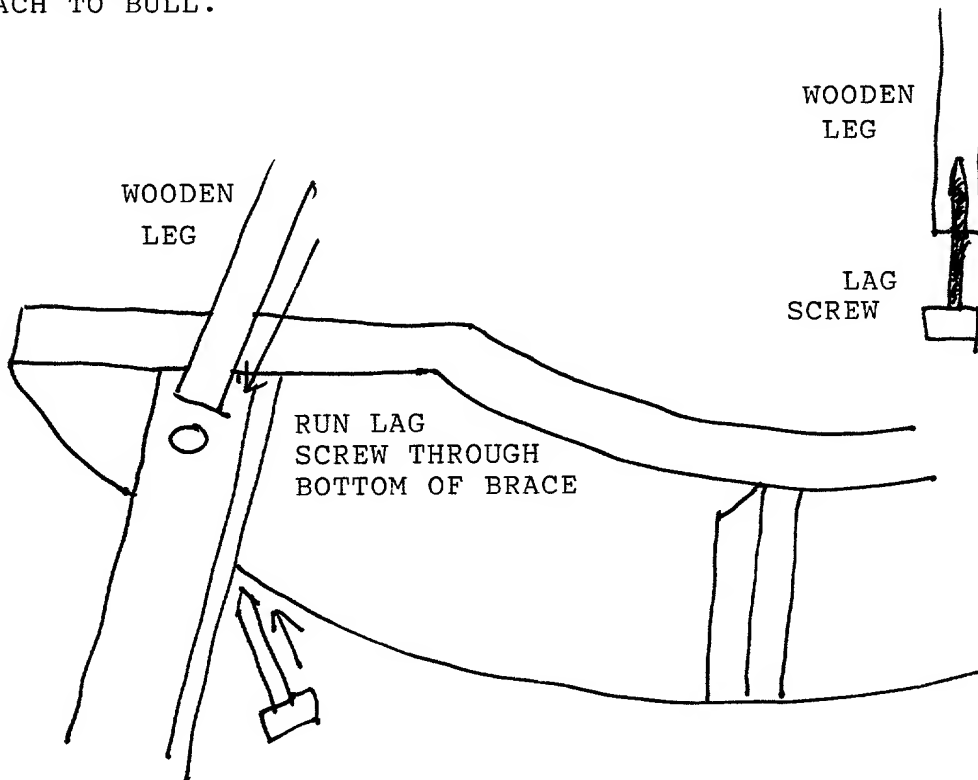


(1)

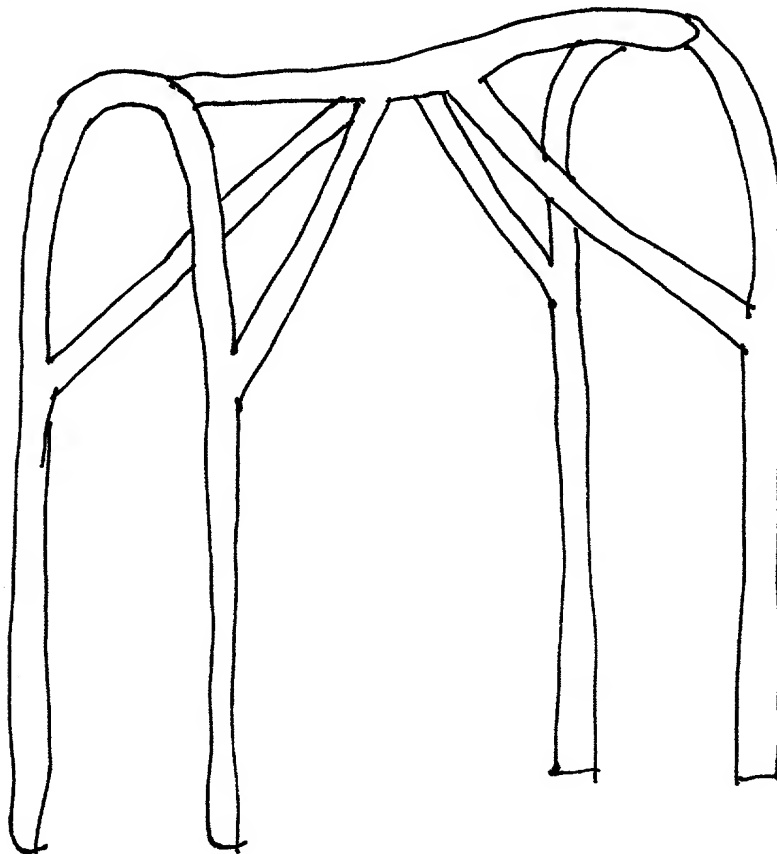
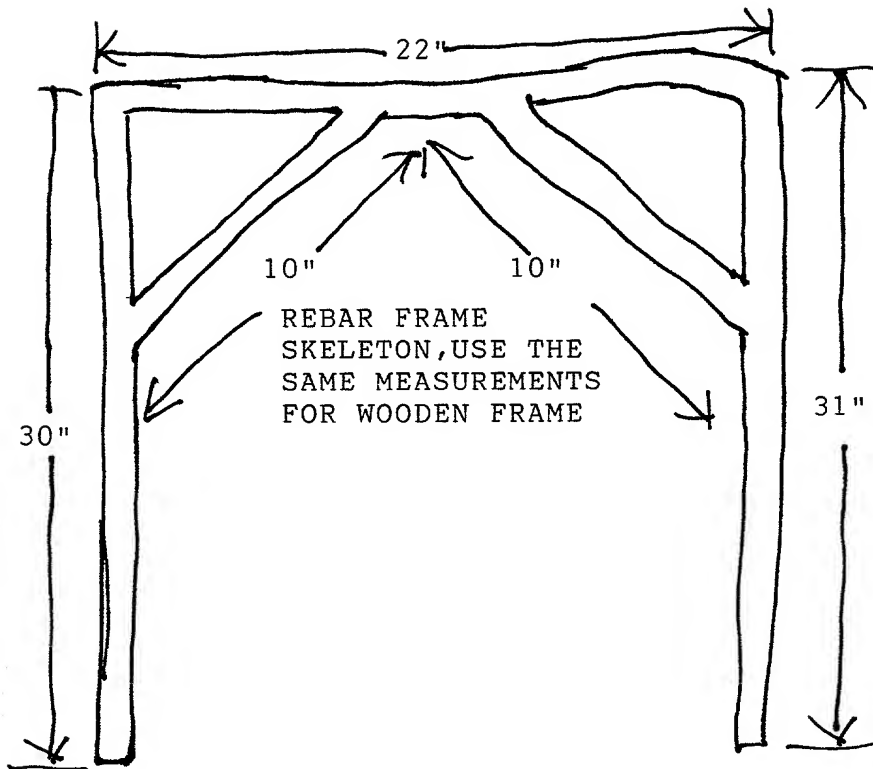


10007478-110804
T030T 824000

PLACEMENT OF WIRE PIECES TO TOPLINE
AND BODY SECTIONS

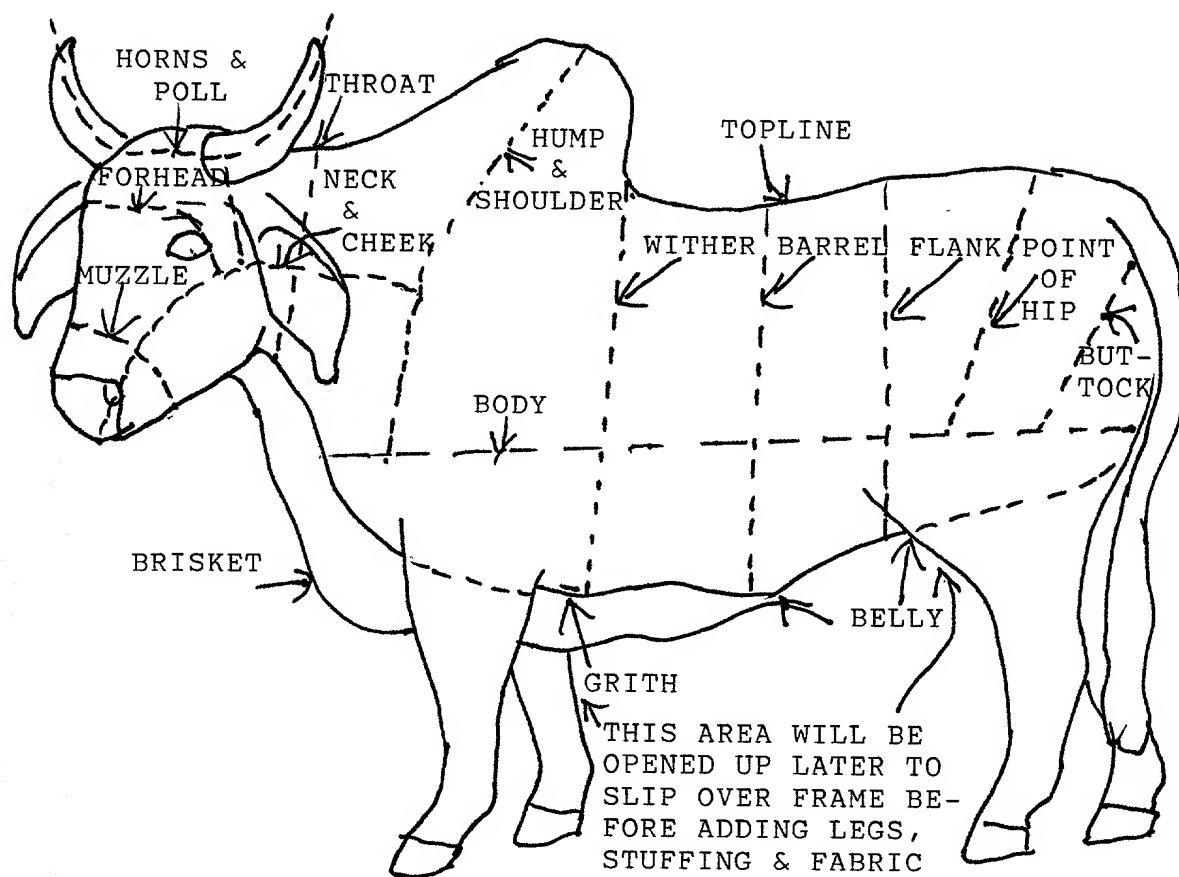

10007473-10001

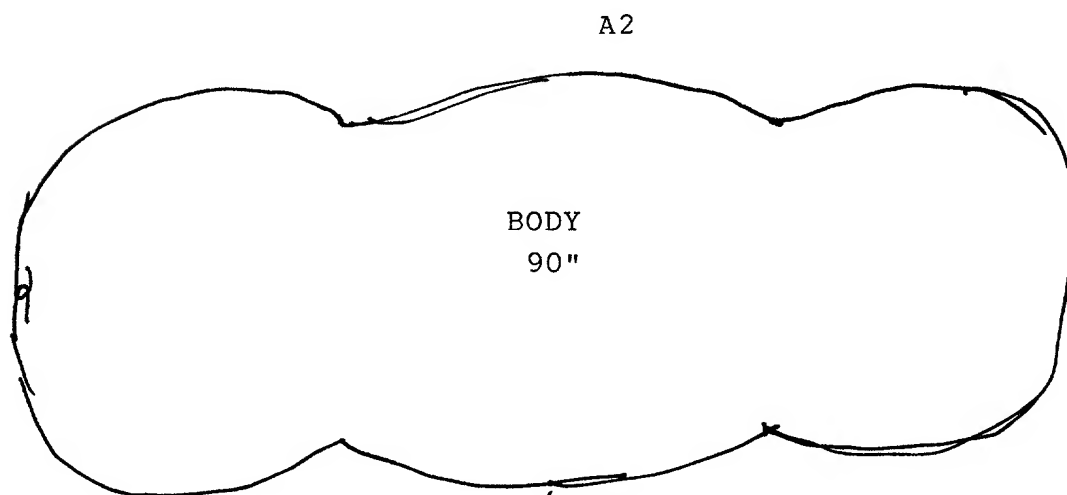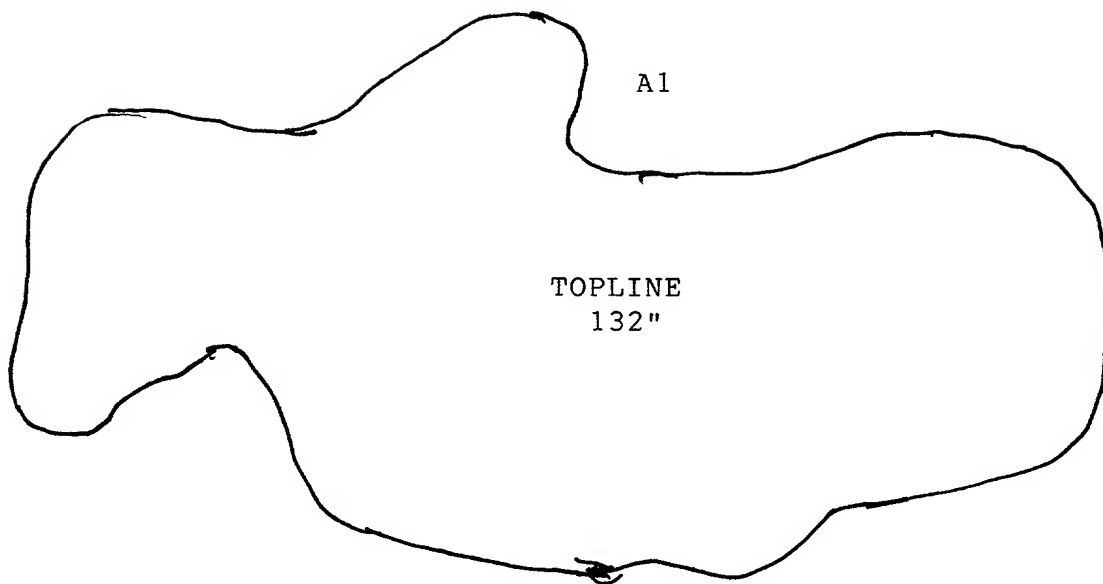

B1

WITHERS
44"


B2

BARREL
45"

B3


FLANK
40"

FOOT " 24.00"

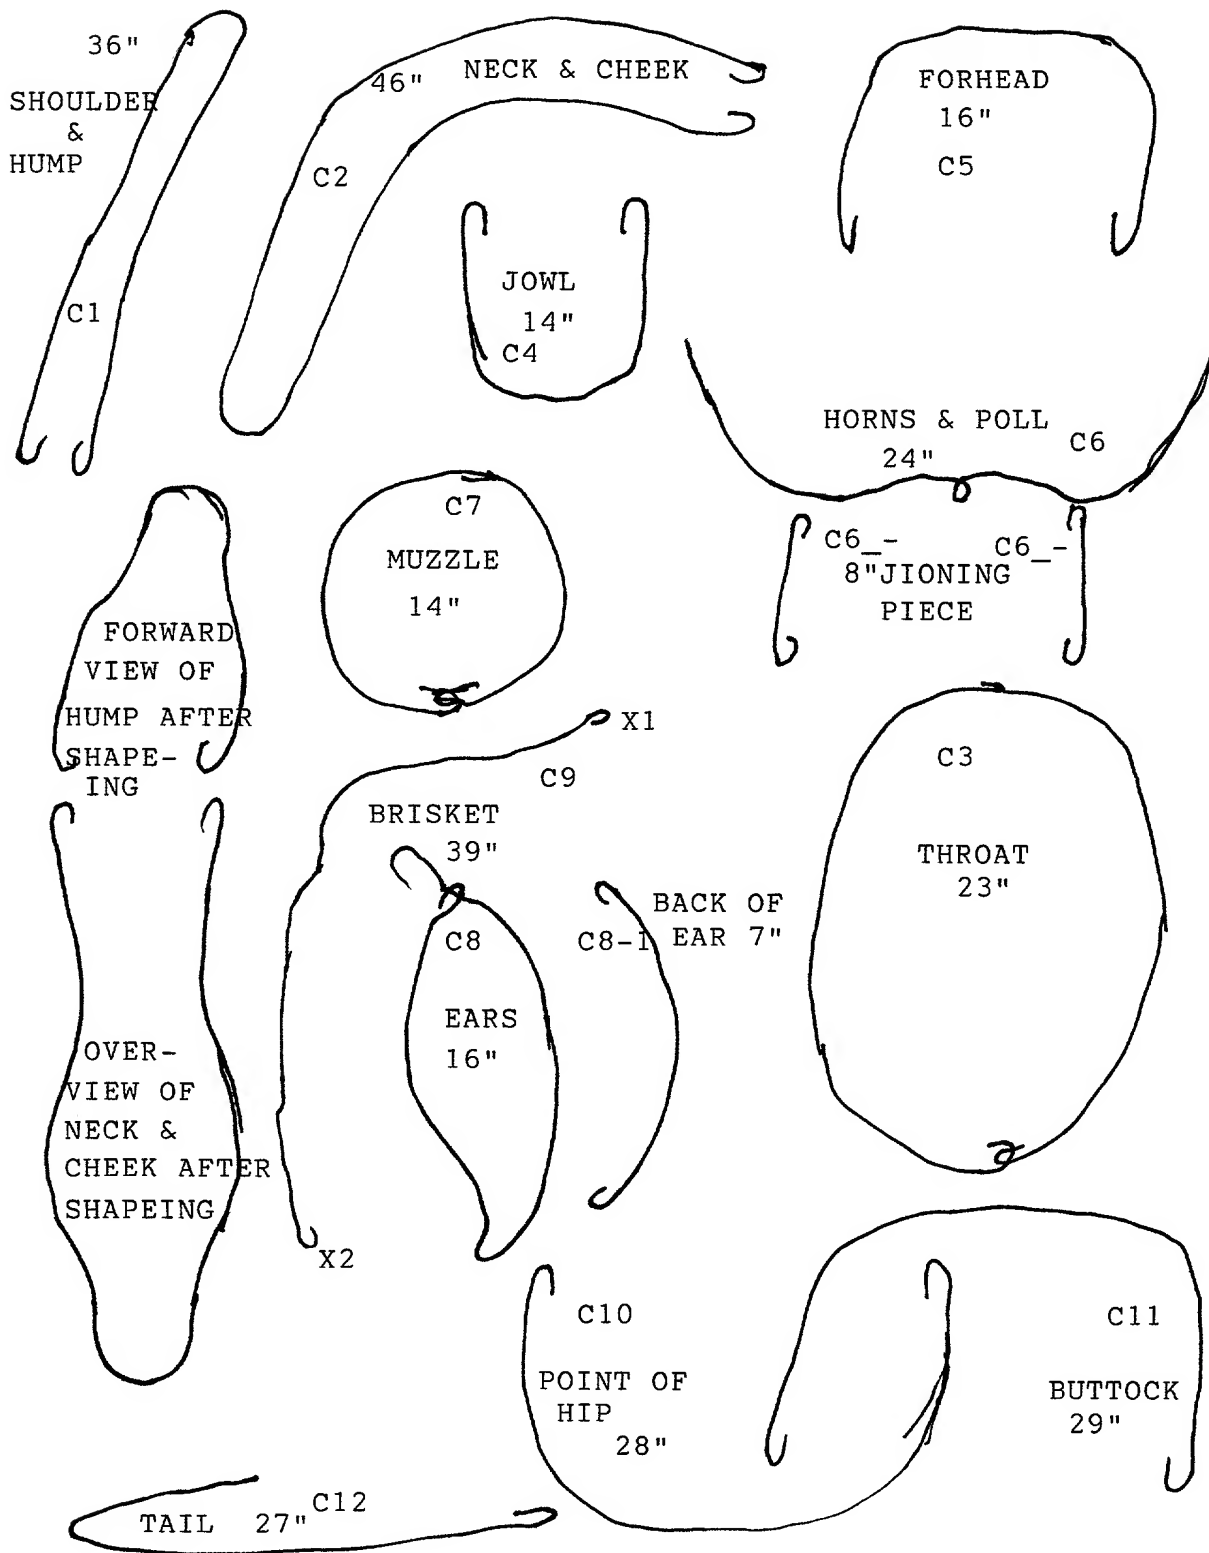


10007478 100074

PLACEMENT SHEET

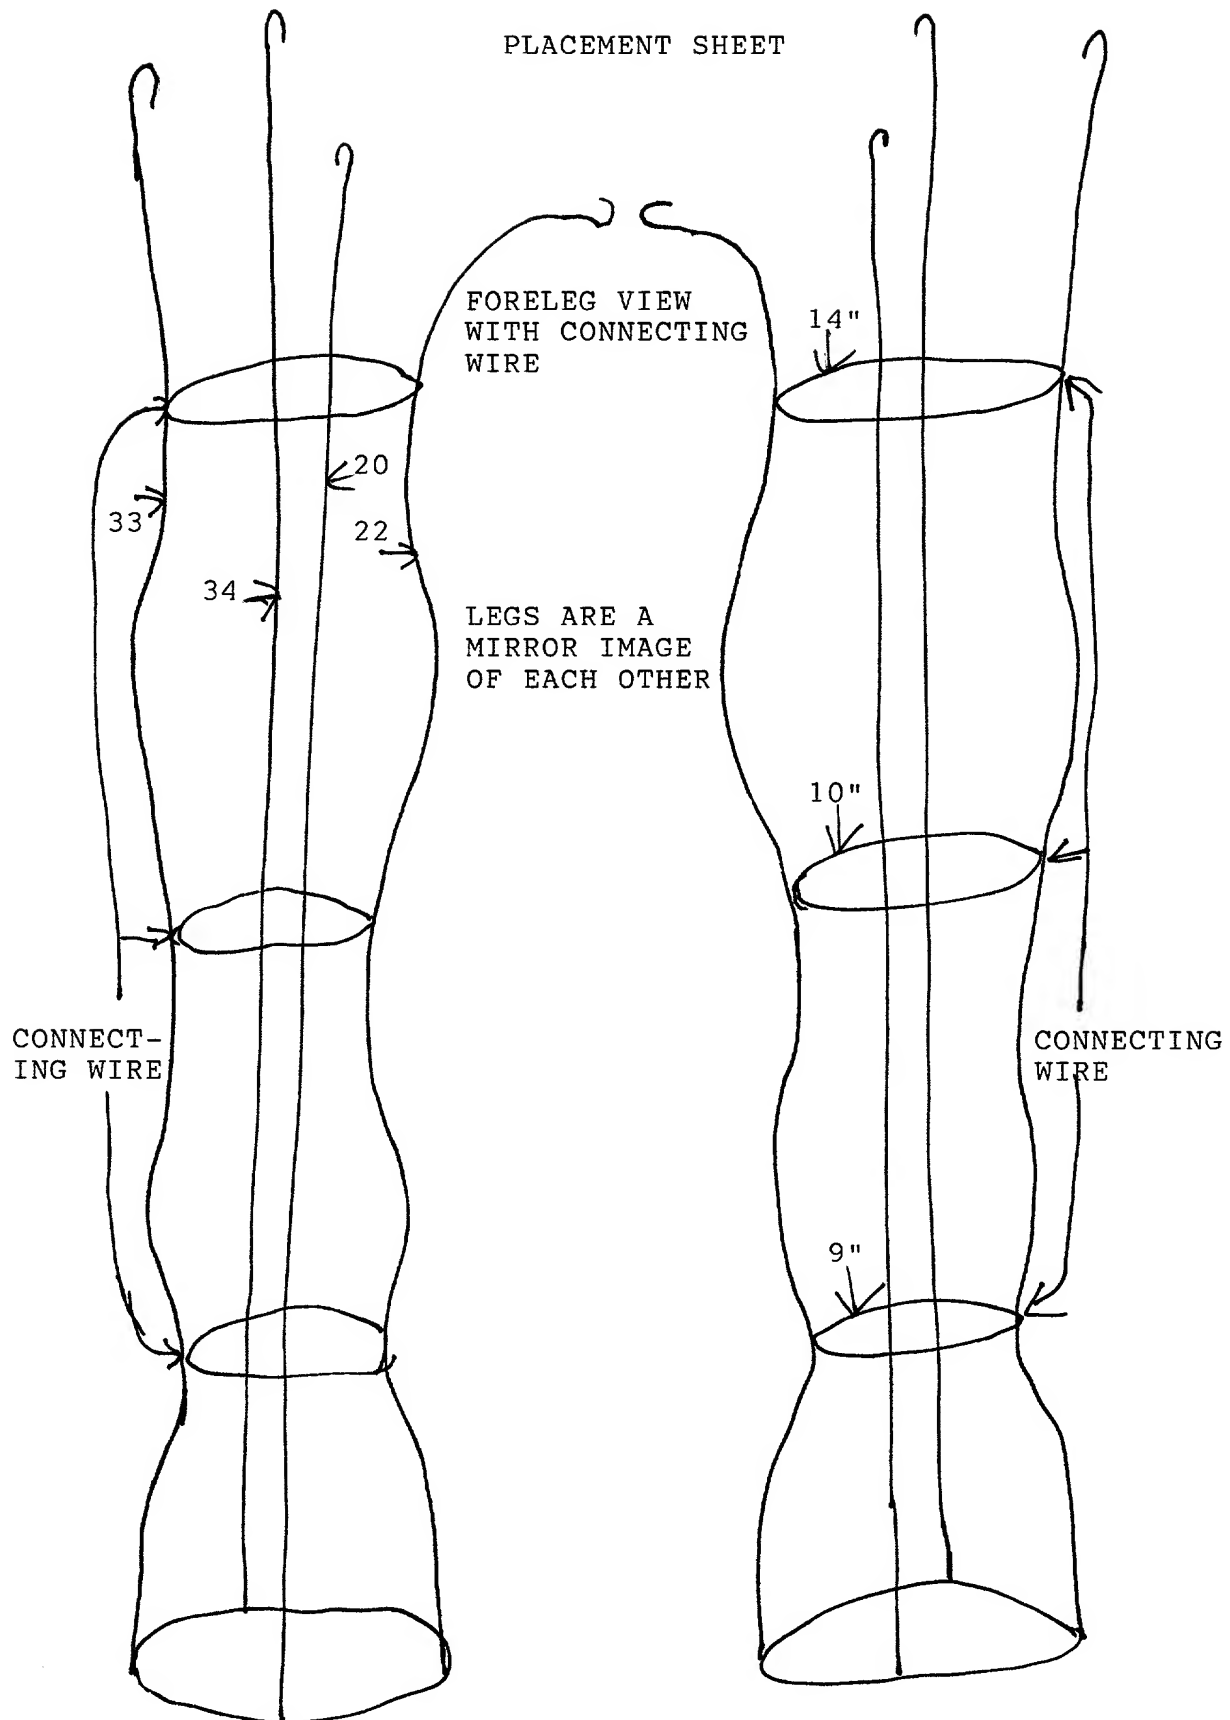


FOOT 242001

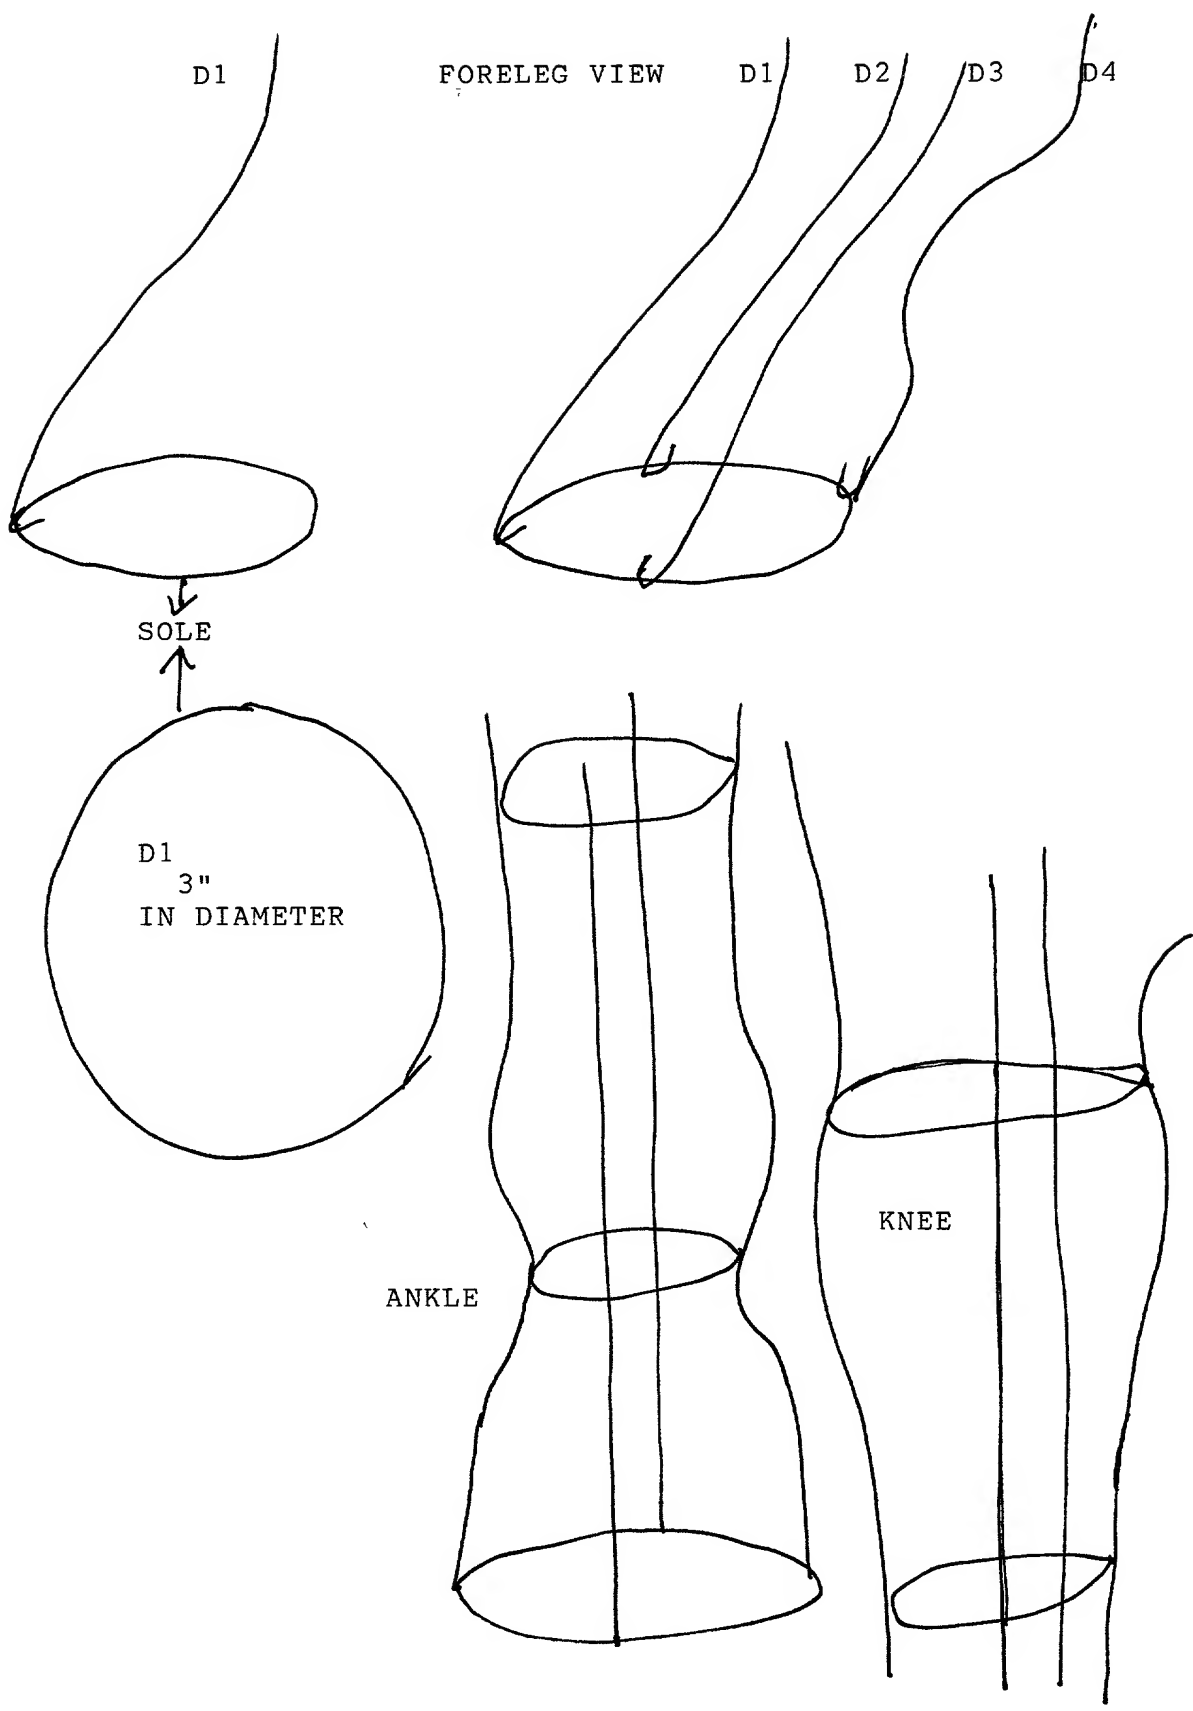


FOOT " 3242000T


100743-1034
"844000"

(8)

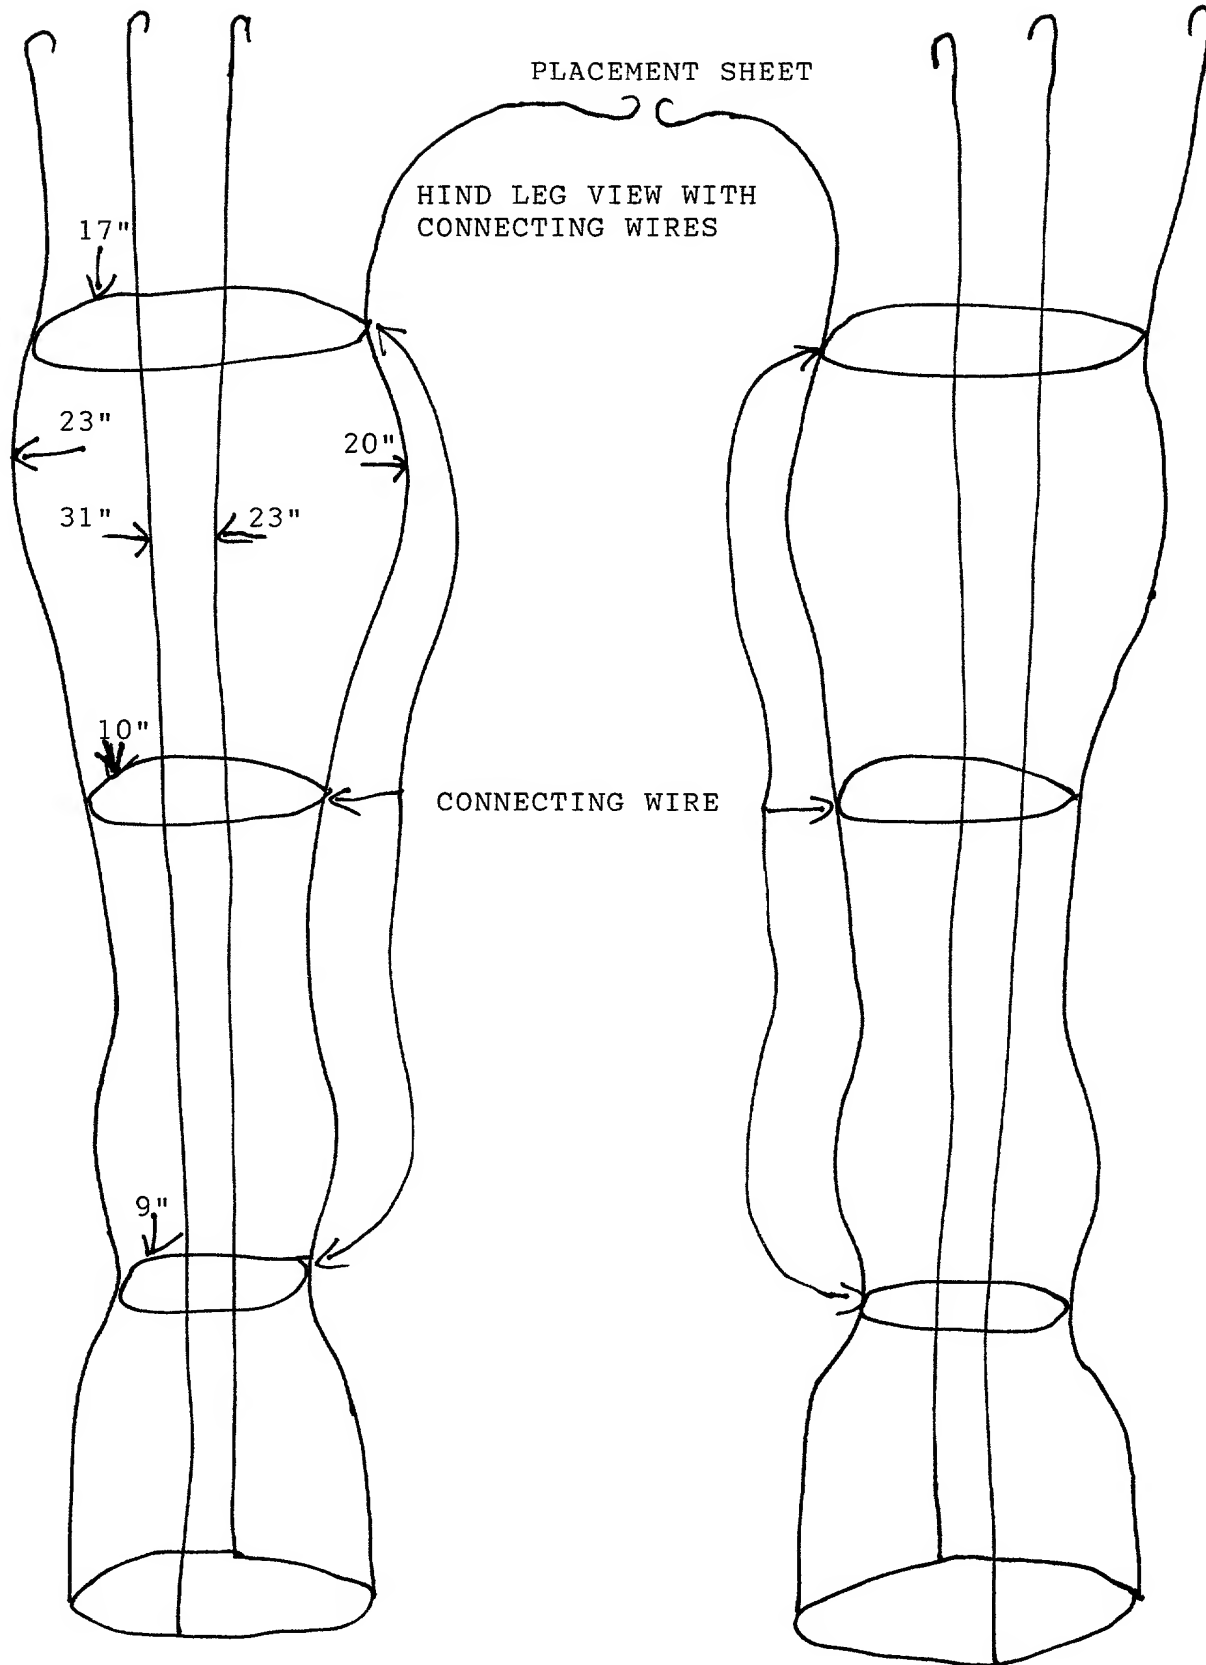


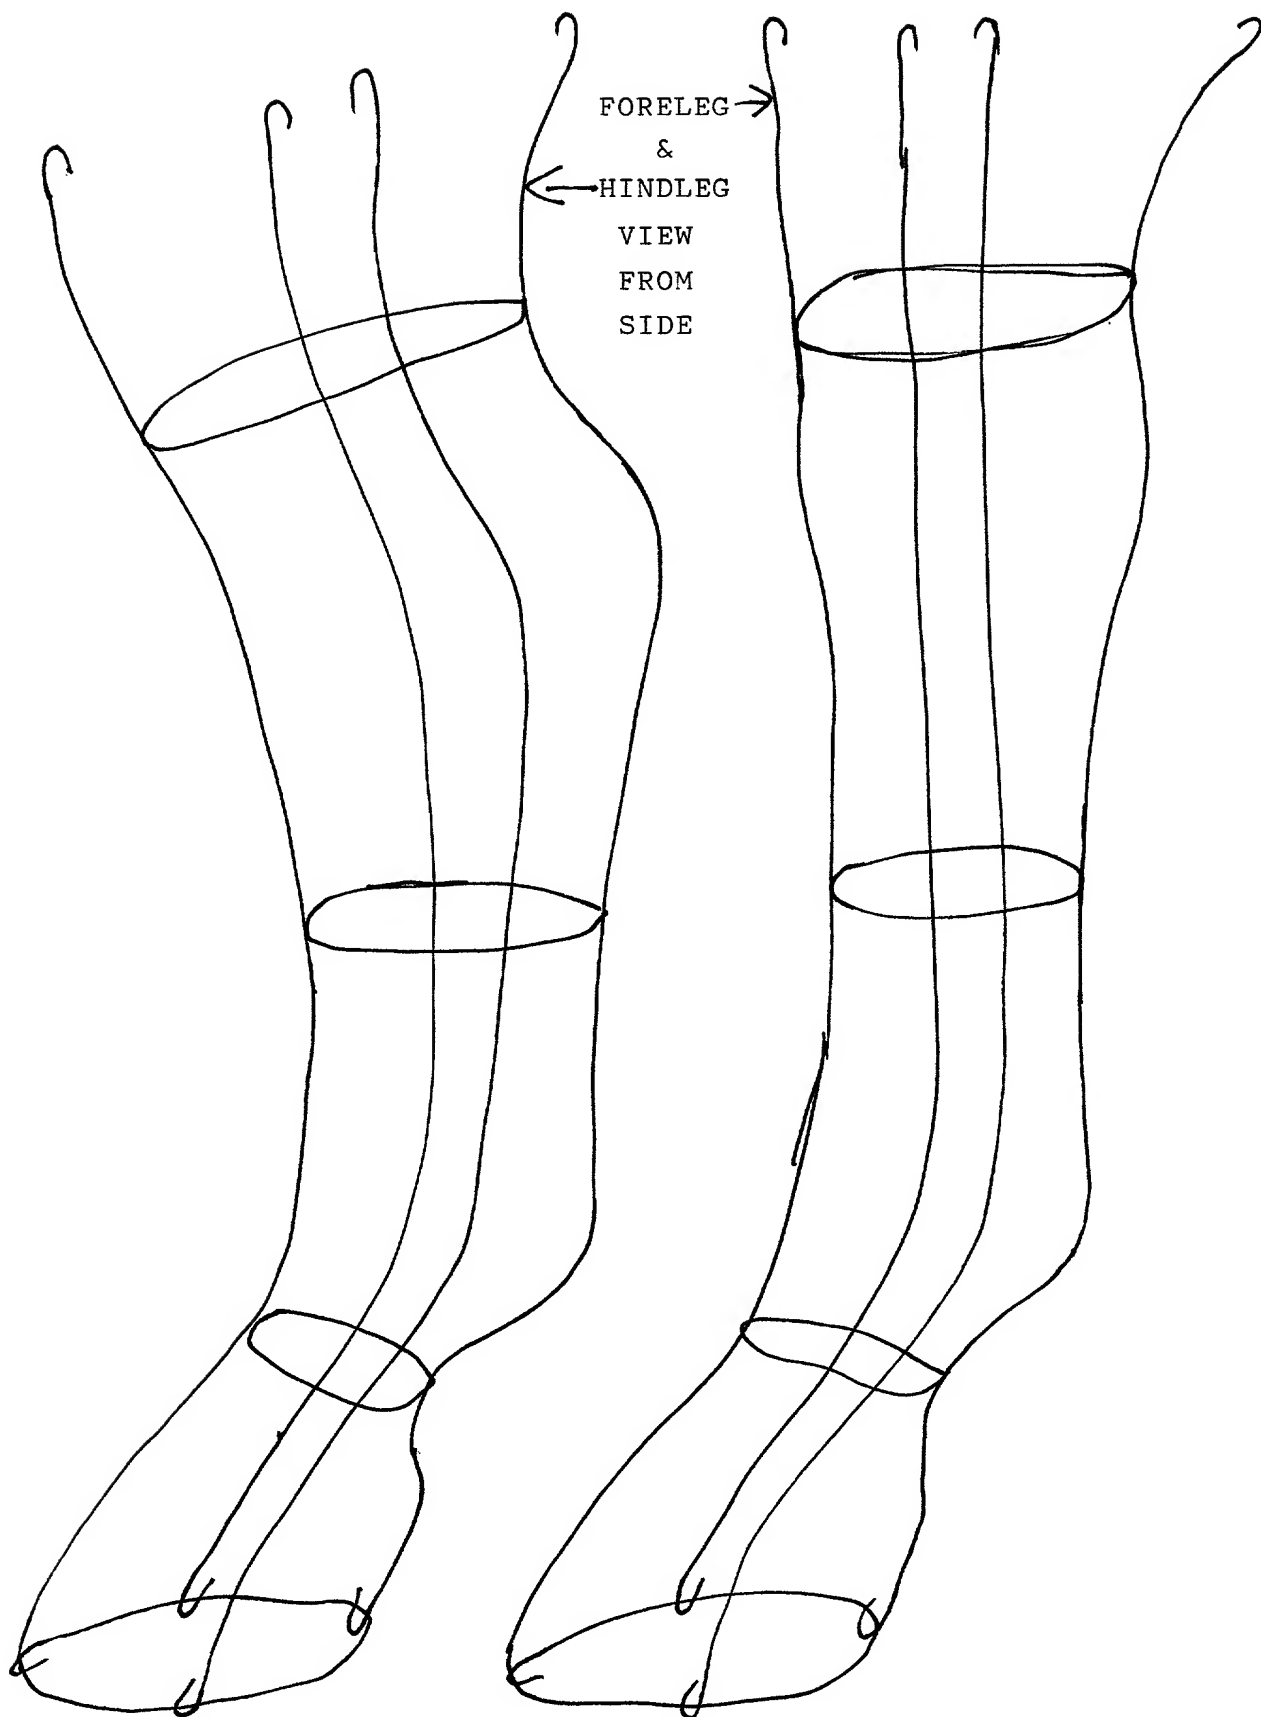

WITH OR WITHOUT
BULL ROPE & BELLS

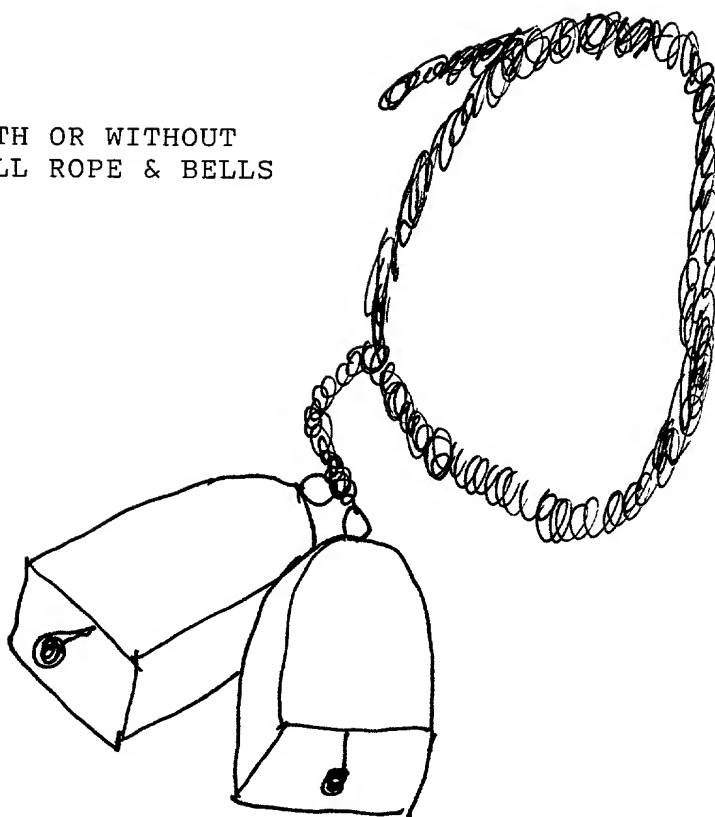

WITH OR WITHOUT
FLANK ROPE

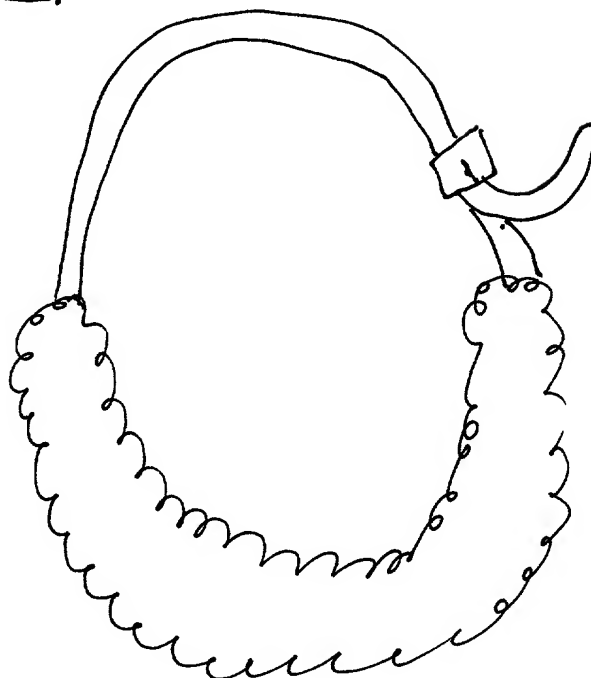

TOP SECRET 3242000T

100047-1094

